



Contact (866) 758-3900 for assistance.
Do not return to place of purchase.

Assembly Instructions

Model No. S-1073

Hardware/Parts

1	Screen	60-S1073-SN
2	Back Foot (2)	60-S1073-BKF
3	Front Leg (2)	60-S1073-FLG
A	Screw	6 pcs
B	Nut	4 pcs

Tools Required for Assembly (Not Included)

Phillips Head Screw Driver and Adjustable Wrench.

Steps




Step 1

Attach back foot to screen.

Step 2

Attach front leg to screen.

⚠ CAUTION: Keep this product clean by using a damp cloth. DO NOT use abrasive cleaners, as it will cause parts to tarnish.

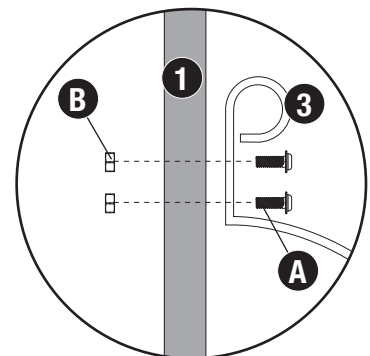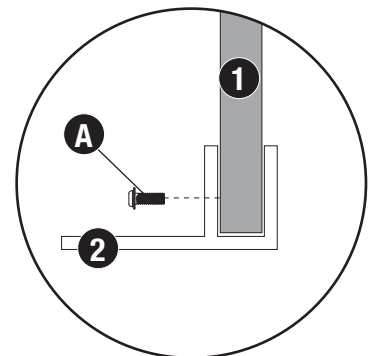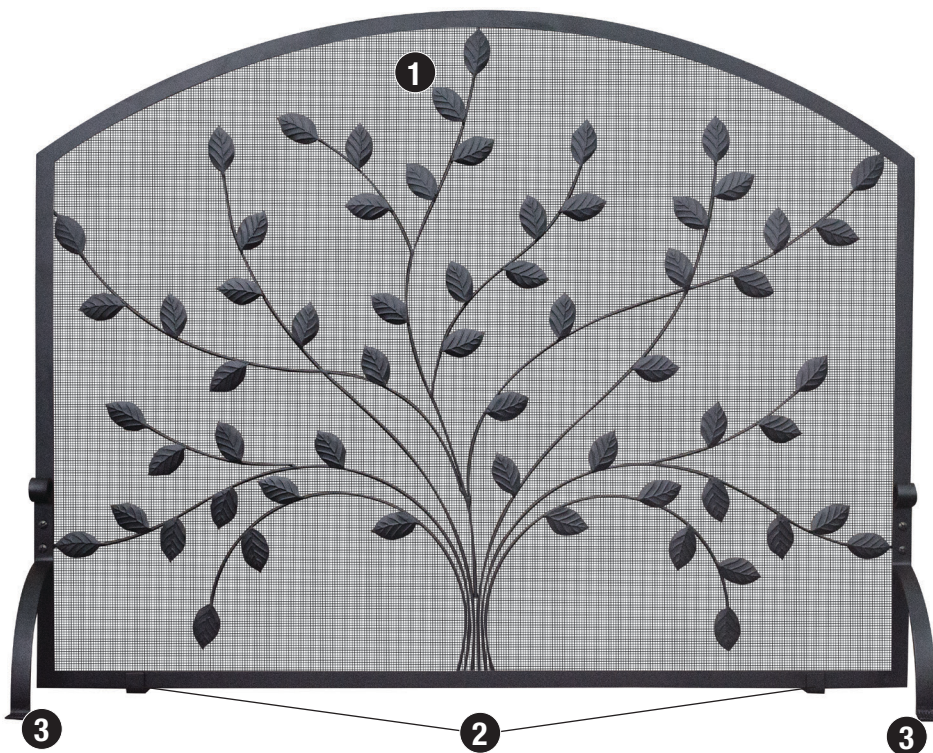



Pour toute assistance, appeler le 1.866.758.3900.
Ne pas retourner au point de vente.

Instructions d'assemblage Modèle n° S-1073

Quincaillerie/Pièces

1	Pare-étincelles	60-S1073-SN
2	Pied arrière (2)	60-S1073-BKF
3	Pied avant (2)	60-S1073-FLG
A	Vis	6 pcs
B	Écrou	4 pcs

Outils requis pour l'assemblage (non fournis)

Tournevis cruciforme phillips et clé à molette.

Étapes

Étape 1

Fixez les pieds arrière au pare-étincelles.

Étape 2

Fixez les pieds avant au pare-étincelles.

⚠ ATTENTION : Veiller à ce que cet article demeure propre en le nettoyant à l'aide d'un chiffon humide. NE PAS utiliser de nettoyeurs abrasifs car ils risquent de ternir les pièces.

