 










 


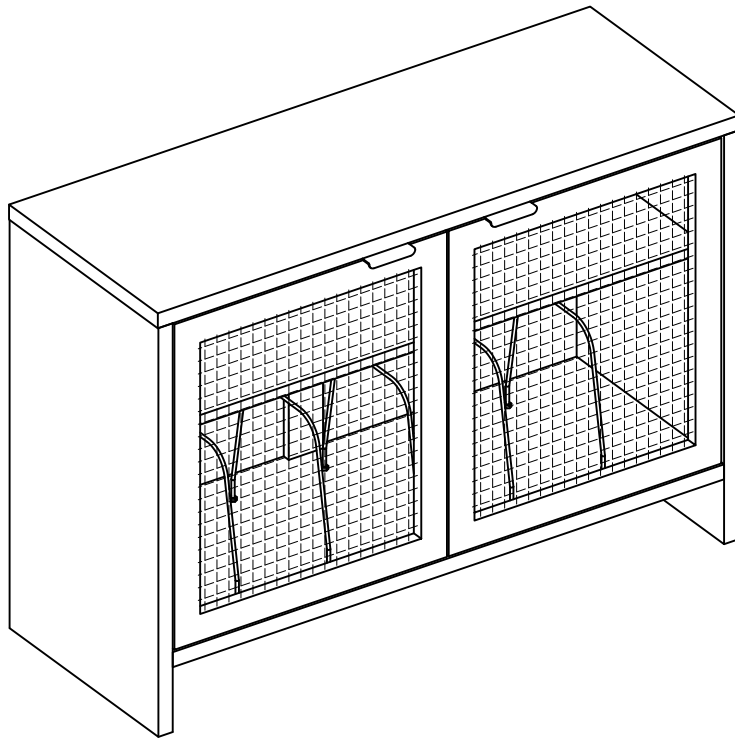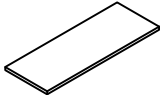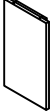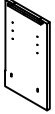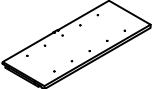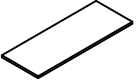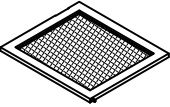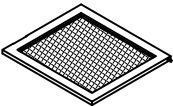

CROSLEY
FURNITURE


 

 


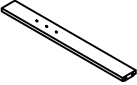


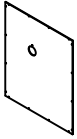



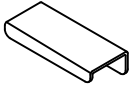


Record Storage Media Console
CF1146

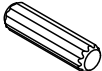

PARTS LIST

 
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D2</p> 	<p>E2</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Adjustable Shelf 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H2</p> 	<p>I2</p> 	<p>J2</p> 
<p>Left Door 1PC</p>	<p>Right Door 1 PC</p>	<p>Middle Back Panel 1 PC</p>	<p>Left Back Panel 1 PC</p>	<p>Right Back Panel 1 PC</p>
<p>K</p> 	<p>L2</p> 	<p>M</p> 		
<p>Support Leg 1 PC</p>	<p>Cover 2 PCS</p>	<p>Metal Wire 5 PCS</p>		

HARDWARE LIST

#1		#2		#3		#4	 1/4"*32mm	#5	 1/4"*11mm
	Handle 2 PCS		Double Magnet 2 PCS		Shelf Holder 5 PCS (Extra 1)		Round Head Bolt 8 PCS (Extra 1)		Spring Washer 8 PCS (Extra 1)
#6	 1/4"*13mm	#7	 8*30mm	#8	 M4	#9	 6*3*15mm	#10	 6*3*15mm
	Flat Washer 8 PCS (Extra 1)		Wood Dowel 12 PCS (Extra 1)		Hex Nut 10 PCS (Extra 1)		Long Screw 4 PCS (Extra 1)		Round Head Screw 4 PCS (Extra 1)
#11	 8*3*12mm	#12		#13	 M4	#14	 M2	#15	
	Short Screw 32 PCS (Extra 1)		Binding Post 2 SETS (Extra 1)		Allen Wrench 1 PC		Small Allen Wrench 1 PC		Wrench 1 PC
#16									
	Safety Strap Kit 1 SET								

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.

 



Phillips Head Screwdriver

 
Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach double magnets (part #2) to panels (parts A & D2) using round head screws (part #10) and phillips head screwdriver.

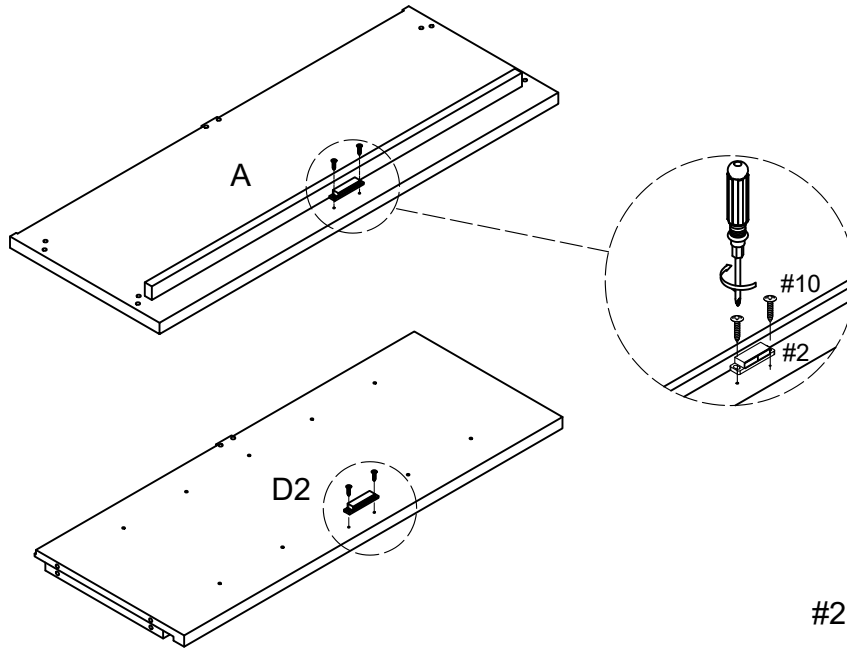

 
- | | | |
|-----|---|-----|
| #2 |  | x 2 |
| #10 |  | x 4 |

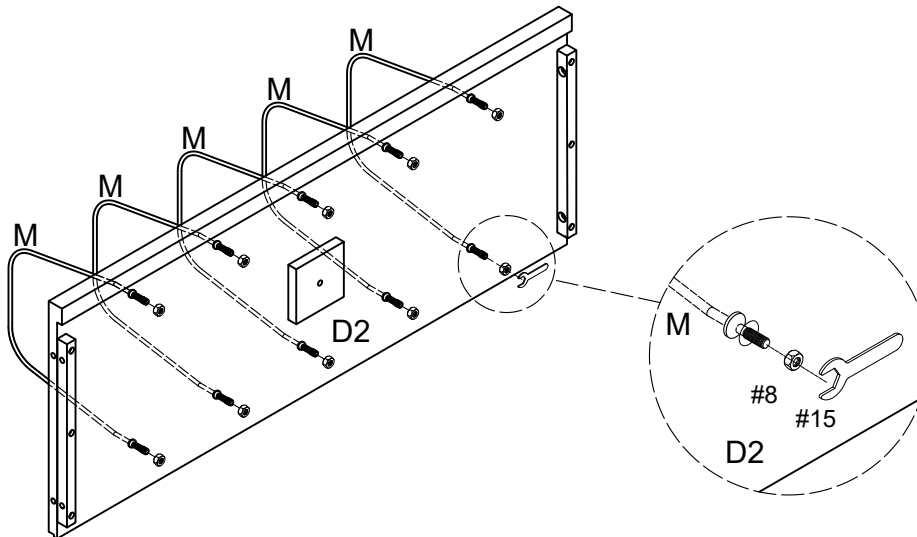

Step 2. Attach metal wires (part M) to bottom panel (part D2) using hex nuts (part #8) and wrench (part #15).



 
- | | | |
|-----|---|------|
| #8 |  | x 10 |
| #15 |  | x 1 |

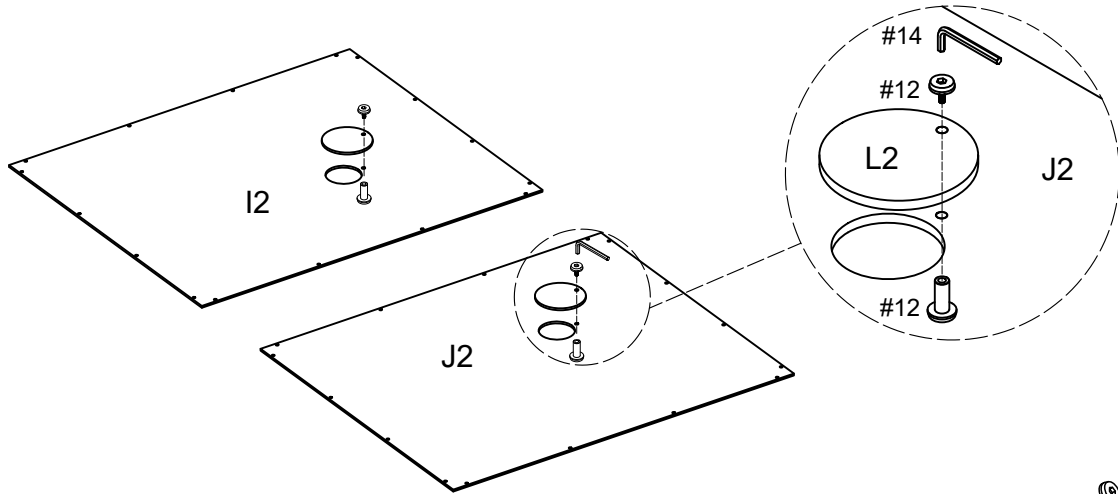

Step 3. Attach covers (part L2) to back panels (parts I2 & J2) using binding posts (part #12) and small allen wrench (part #14).



 
- #12  x 2
- #14  x 1

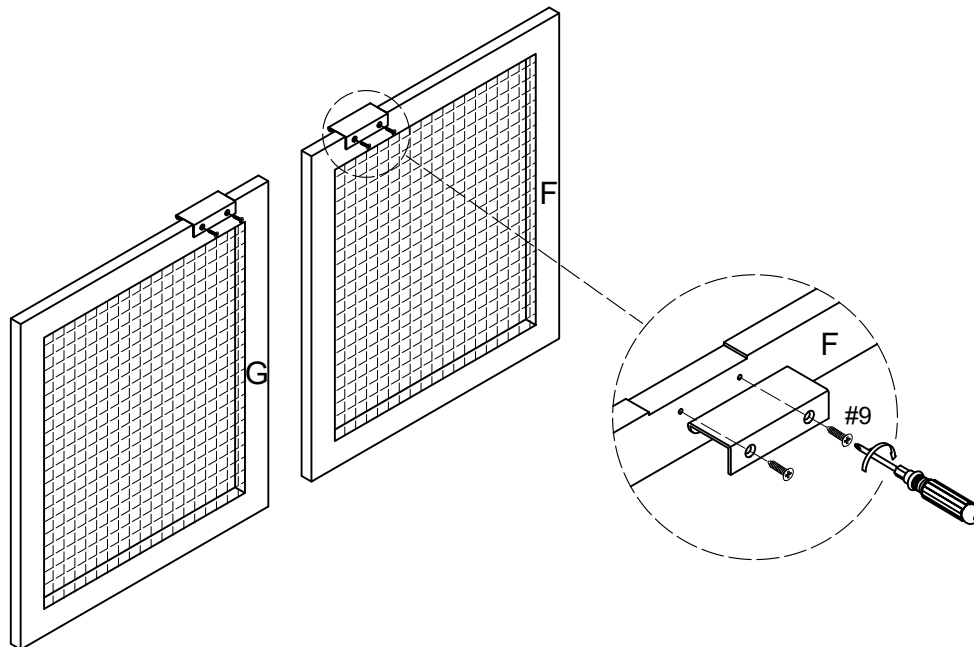Step 4. Attach handles (part #1) to doors (parts F & G) using long screws (part #9) and phillips head screwdriver.



 
- #1  x 2
- #9  x 4



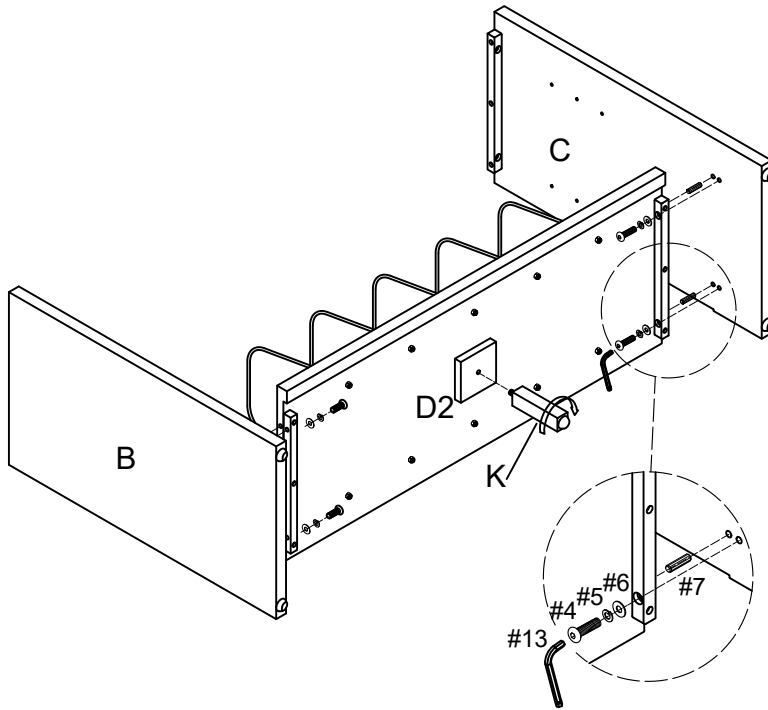


Step 5. Attach panels (parts B & C) to bottom panel (part D2) using wood dowels (part #7), round head bolts (part #4), spring washers (part #5), flat washers (part #6) and allen wrench (part #13). Attach support leg (part K) to bottom panel (part D2).

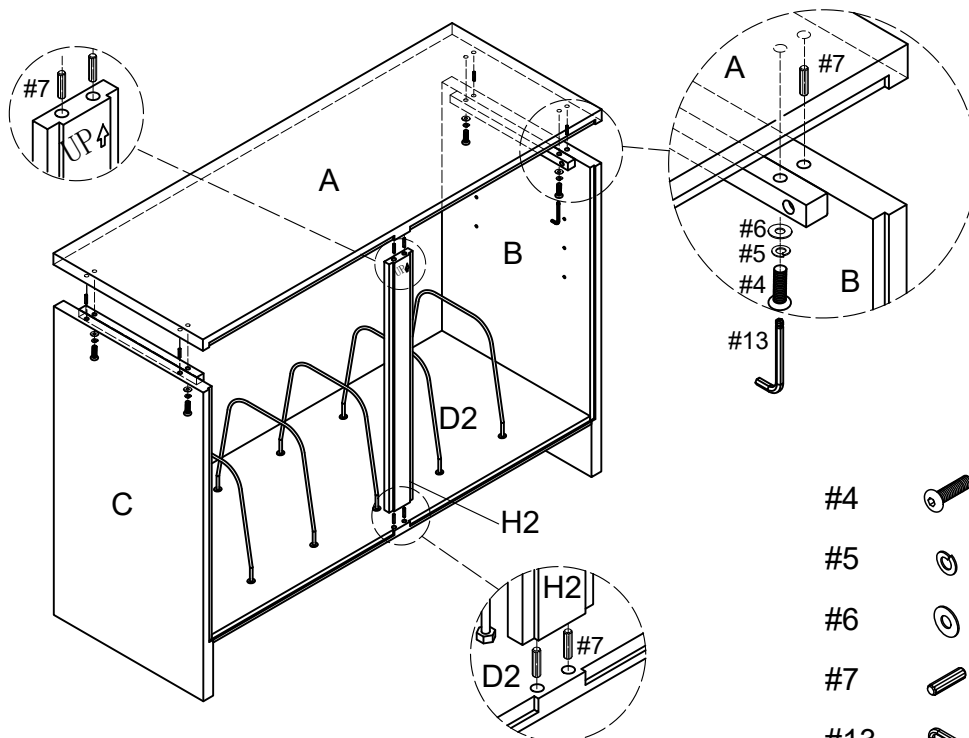

 
- | | | |
|-----|---|-----|
| #4 |  | x 4 |
| #5 |  | x 4 |
| #6 |  | x 4 |
| #7 |  | x 4 |
| #13 |  | x 1 |

Step 6. Carefully turn assembled unit upright. Attach panels (parts A & H2) to assembled unit (parts B, C & D2) using wood dowels (part #7), round head bolts (part #4), spring washers (part #5), flat washers (part #6) and allen wrench (part #13).

 


- | | | |
|-----|---|-----|
| #4 |  | x 4 |
| #5 |  | x 4 |
| #6 |  | x 4 |
| #7 |  | x 8 |
| #13 |  | x 1 |

Step 7. Attach back panels (parts I2 & J2) to assembled unit (parts A, B, C, D2 & H2) using short screws (part #11) and phillips head screwdriver.

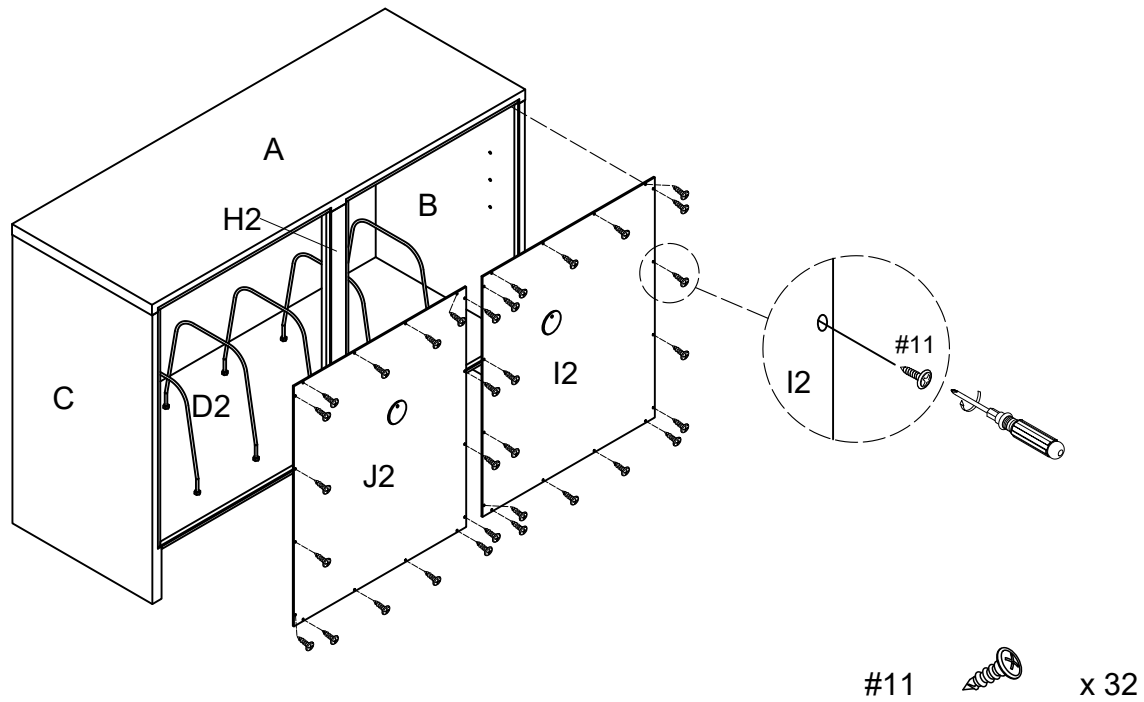

Step 8. Insert shelf holders (part #3) and slide adjustable shelf (part E2) into place.

 
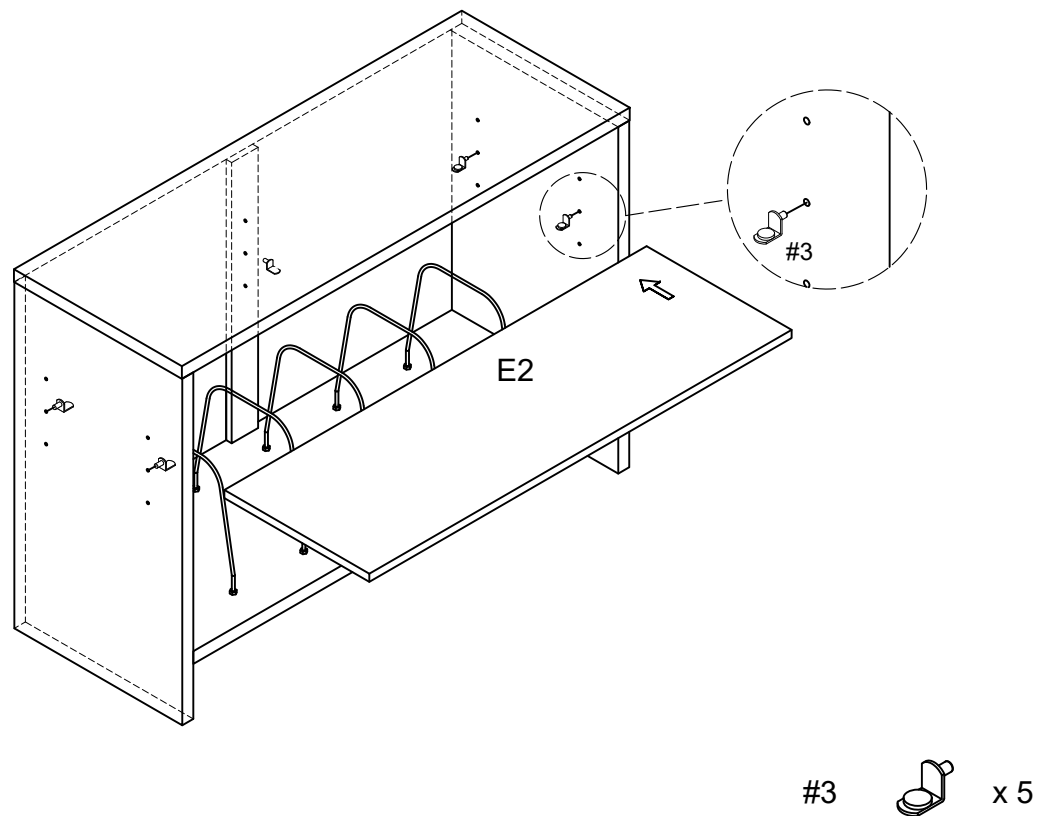 








Step 9. Attach doors (parts F & G) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

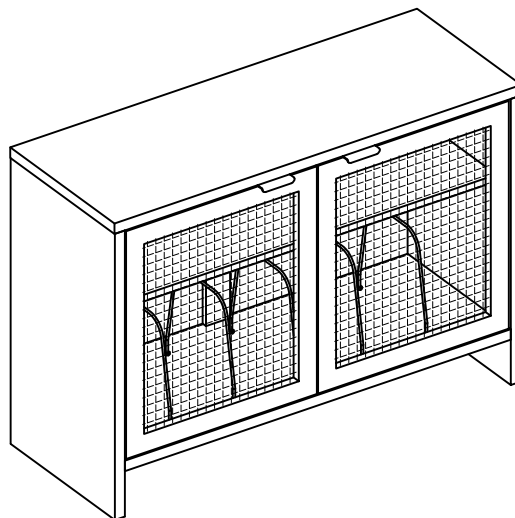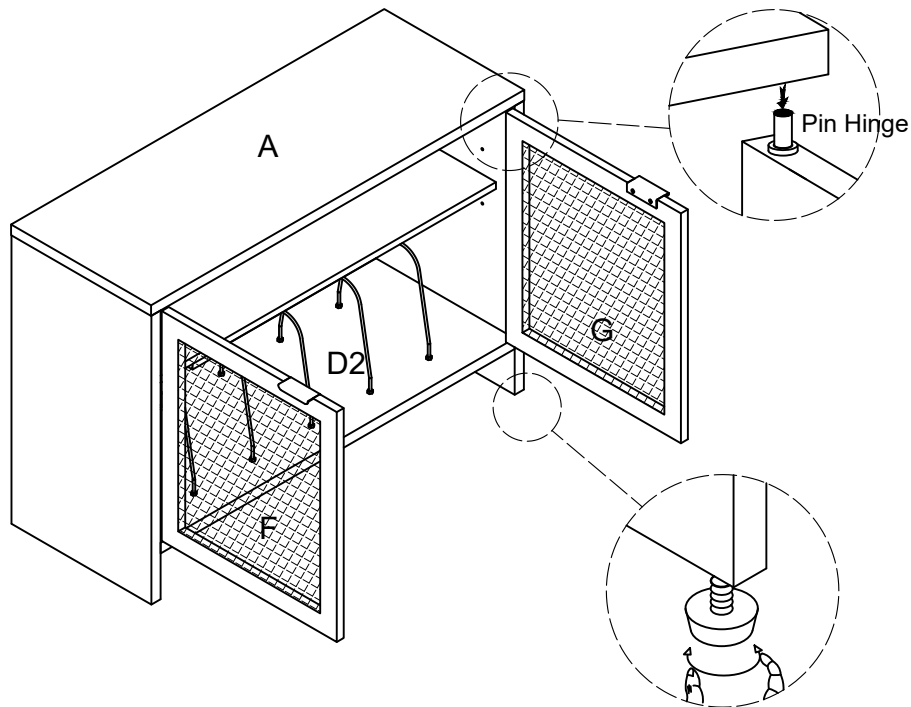NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

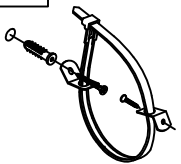Important: Safety strap kit (part #16) must be installed to prevent tipping damage and/or injury.



 
#16	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

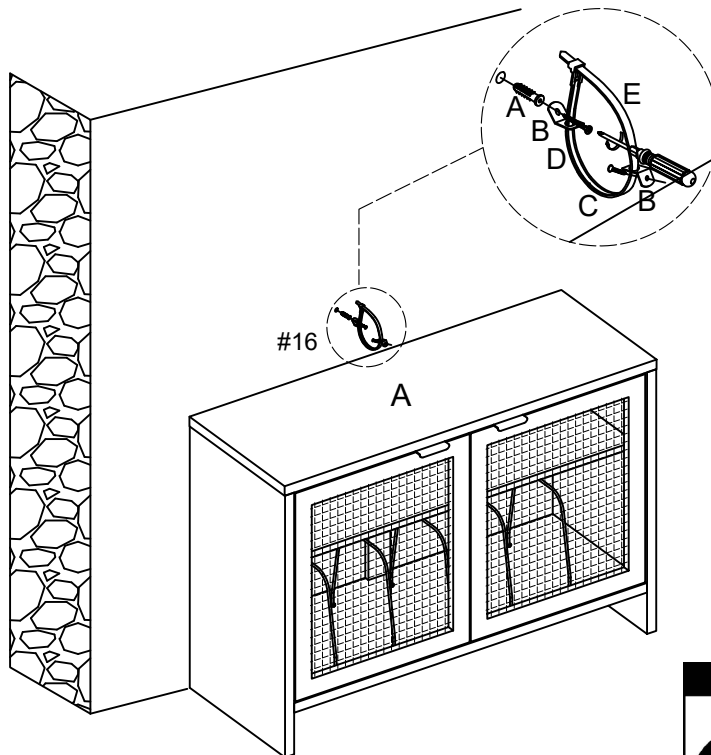

▲ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!