 


WORLD MARKET®

Assembly Instructions

METAL SEGOVIA SOFA

 
 
 
 

 
 
SKU - 619691

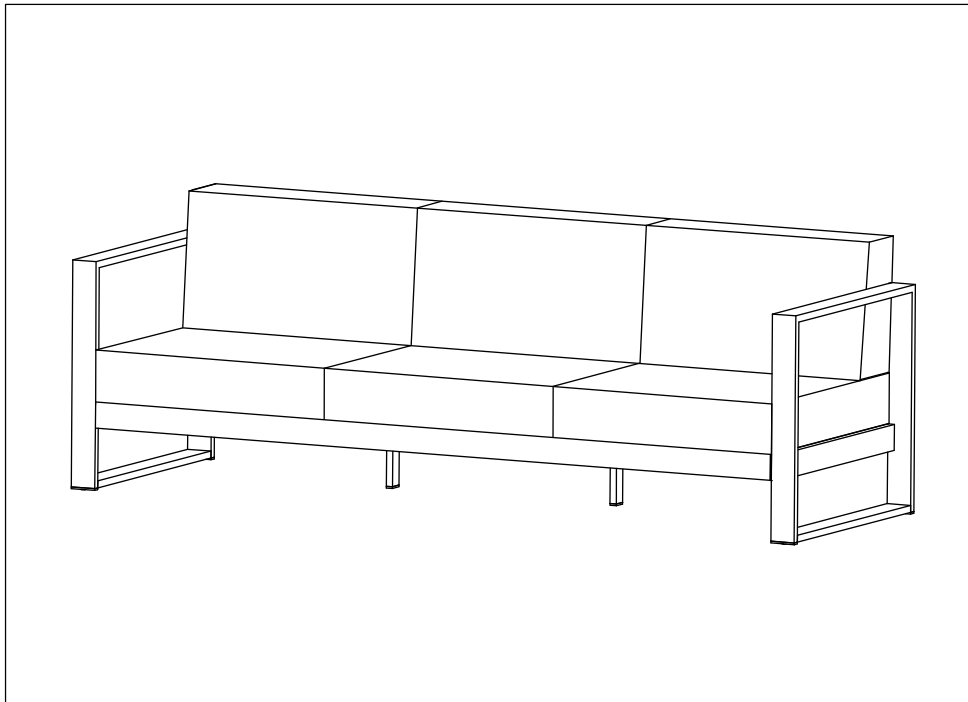





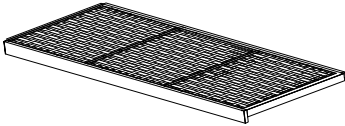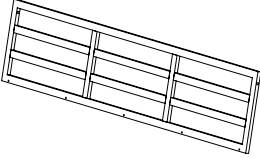 


 
THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS
PERTAINING TO THE ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT
THE NEAREST WORLD MARKET STORE.
IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL
CENTER TOLL FREE AT 877- 967-5362 FOR ASSISTANCE.

All products sold at World Market are not for commercial use
and are intended for residential use only.

Component List

 
LABEL	PICTURE	DESCRIPTION	QTY
A		Seat Frame	1
B		Back Frame	1
C		Right Leg	1
D		Left Leg	1
E		Center Leg	2
F		Back Cushion	3
G		Seat Cushion	3

Hardware List

LABEL	PICTURE	DESCRIPTION	QTY
H-1		Long Allen Bolt (M6x55)mm	2
H-2		Short Allen Bolt (M6x40)mm	13
H-3		Spring Washer M6	15
H-4		Flat Washer (M6x1)mm	15
H-5		Shorter Allen Bolt (M8x20)mm	4
H-6		Spring Washer M8	4
H-7		Flat Washer (M8x1.2)mm	4
T-1		Allen Key	2

Assembly Preparation

Before Beginning:

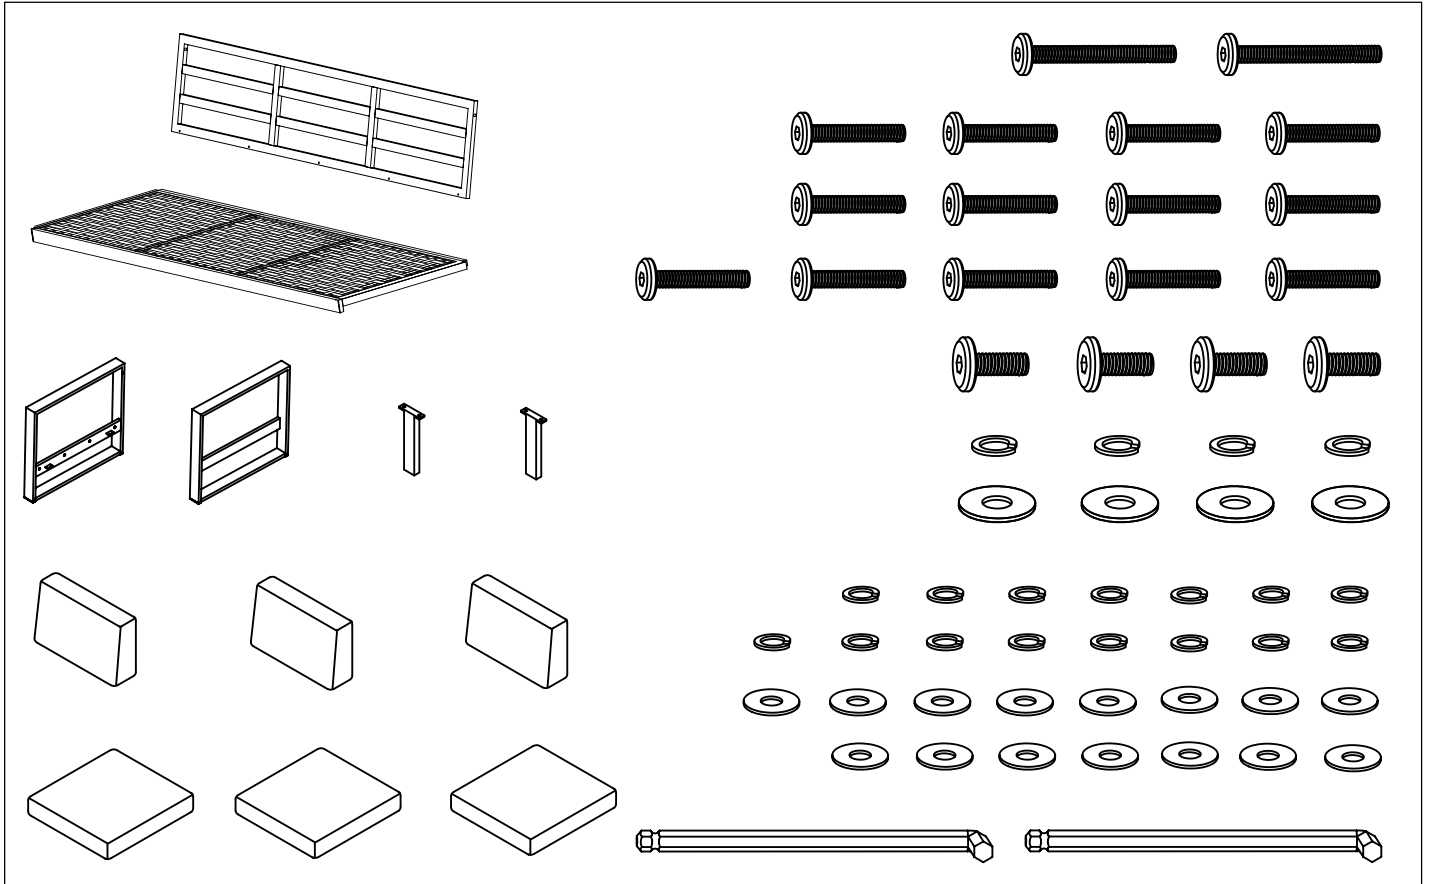

- Unpack all hardware bags and components to ensure you have all parts-



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam) -







- Save all packaging until finished-

 


- In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5362.

Assembly

- H-5  Shorter Allen Bolt (M8x20)mm x4
H-6  Spring Washer M8 x4
H-7  Flat Washer (M8x1.2)mm x4
T-1  Allen Key x2

Step 1

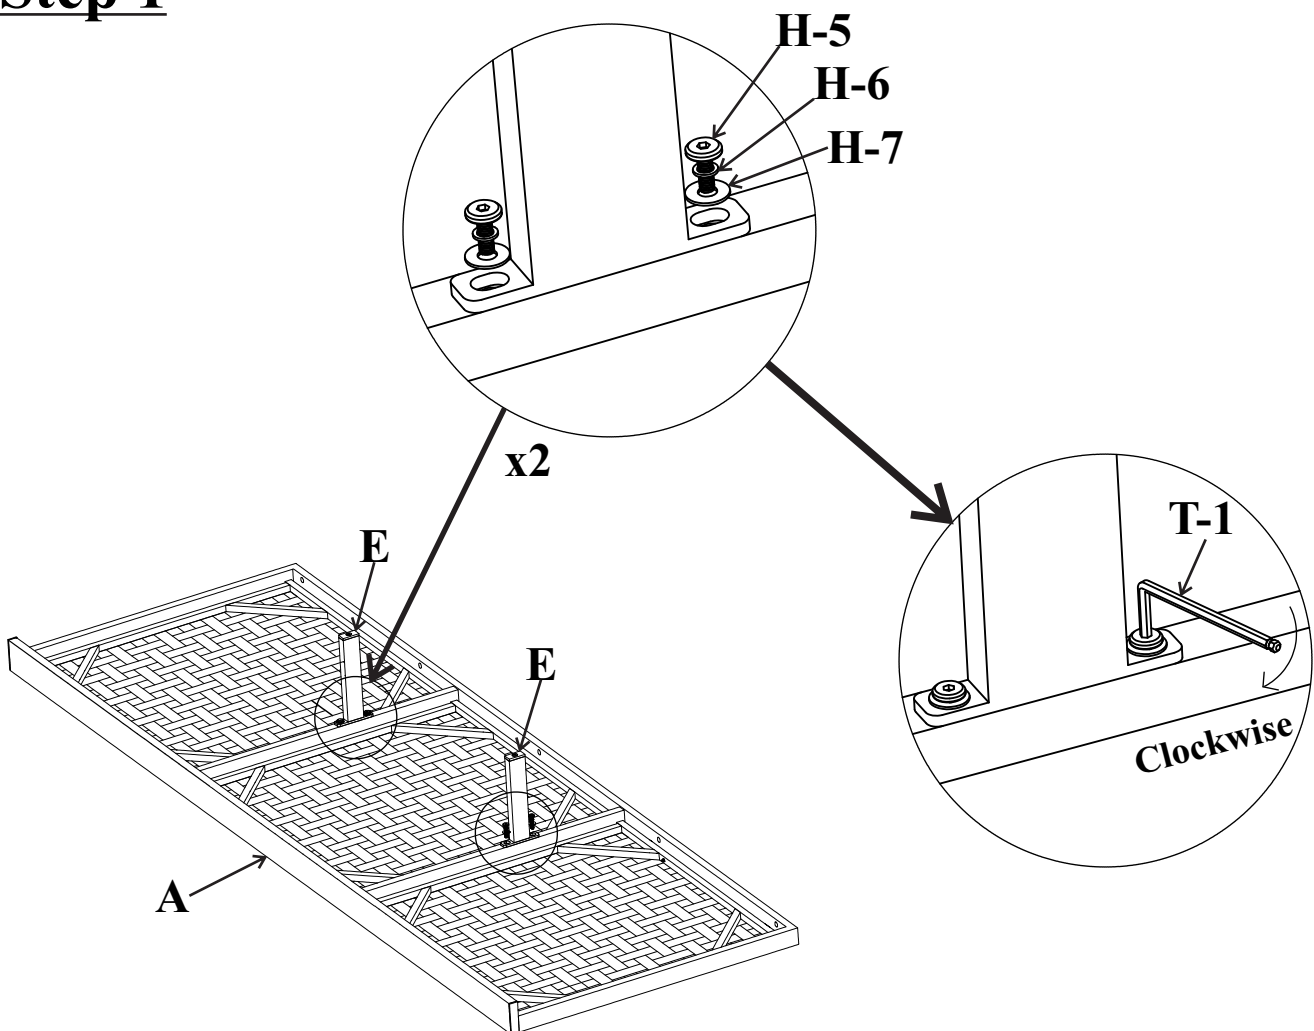





Using a second person to assist you, place Seat Frame (A) onto a padded, non-marring surface. Position Center Leg (E) with the crossbar on Seat Frame (A) as shown in illustration. Secure Center Leg (E) to Seat Frame (A) with Shorter Allen Bolts (H-5), Spring Washers (H-6) and Flat Washers (H-7), stacking the hardware in the order as shown.

Note this step requires the slightly larger Spring Washers (H-6) and Flat Washers (H-7).

 
Engage all bolts first, then fully tighten them using provided Allen Key (T-1).

DO NOT OVER TIGHTEN.

Assembly



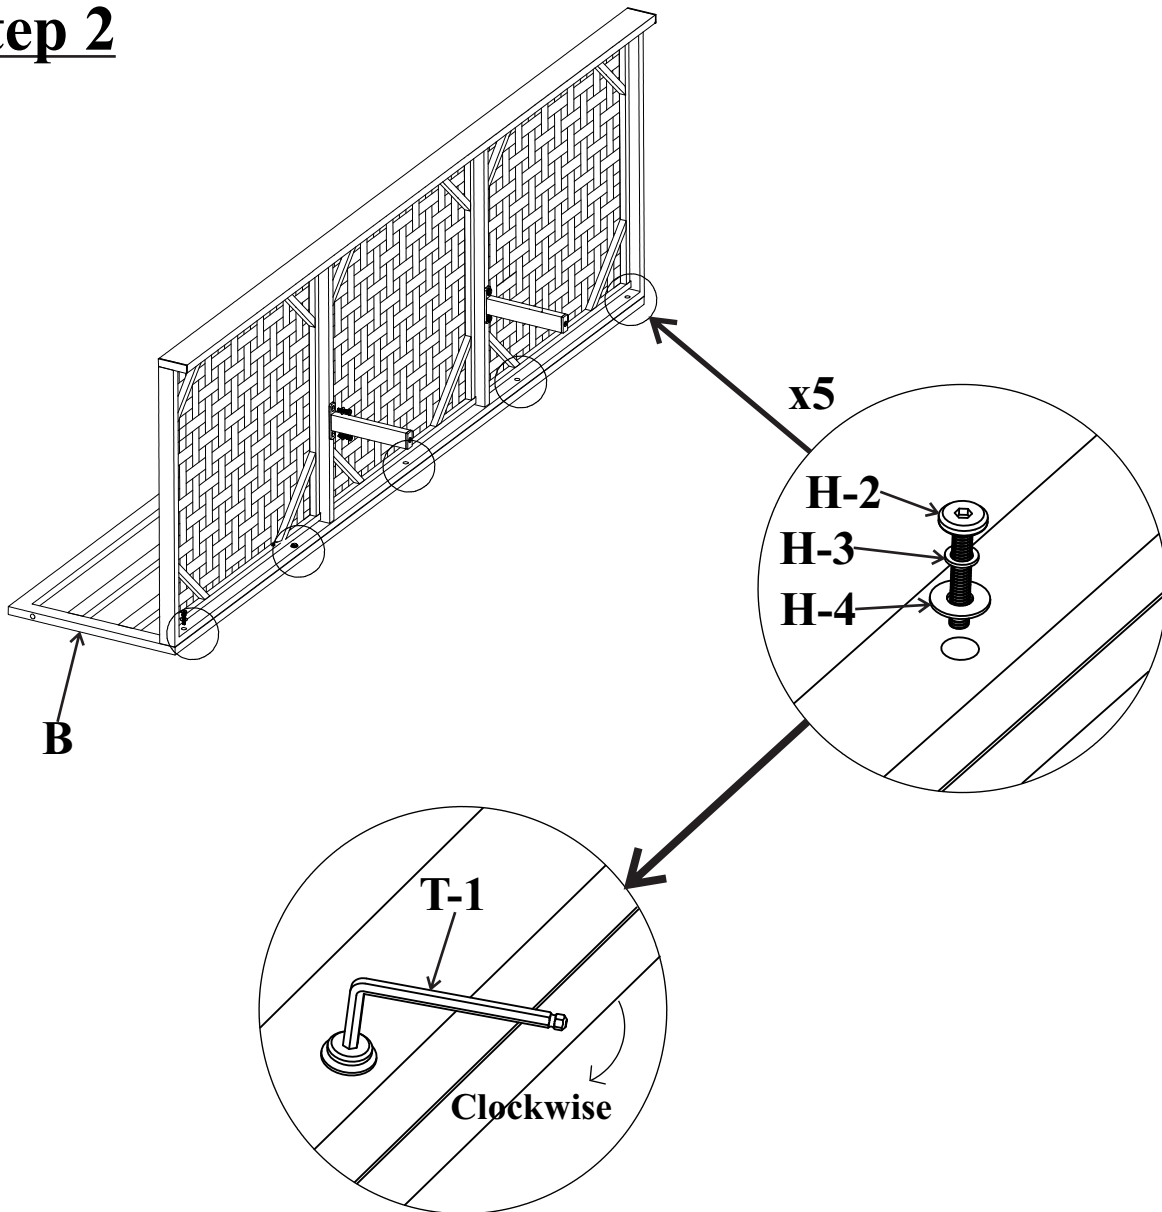


- H-2  Short Allen Bolt (M6x40)mm x5
H-3  Spring Washer M6 x5
H-4  Flat Washer (M6x1)mm x5
T-1  Allen Key x2

Step 2

 


With the help of a second person, position Seat Frame (A) to Back Frame (B) as shown .
While one person holds Seat Frame (A) to Back Frame (B), secure using Short Allen Bolts (H-2),
Spring Washers (H-3) and Flat Washers (H-4), stacking the hardware in the order as shown.
Engage all bolts first, then fully tighten them using provided Allen Key (T-1).
DO NOT OVER TIGHTEN.

Assembly

- H-1  Long Allen Bolt (M6x55)mm x2
- H-2  Short Allen Bolt (M6x40)mm x8
- H-3  Spring Washer M6 x8
- H-4  Flat Washer (M6x1)mm x8
- T-1  Allen Key x2

 
Step 3

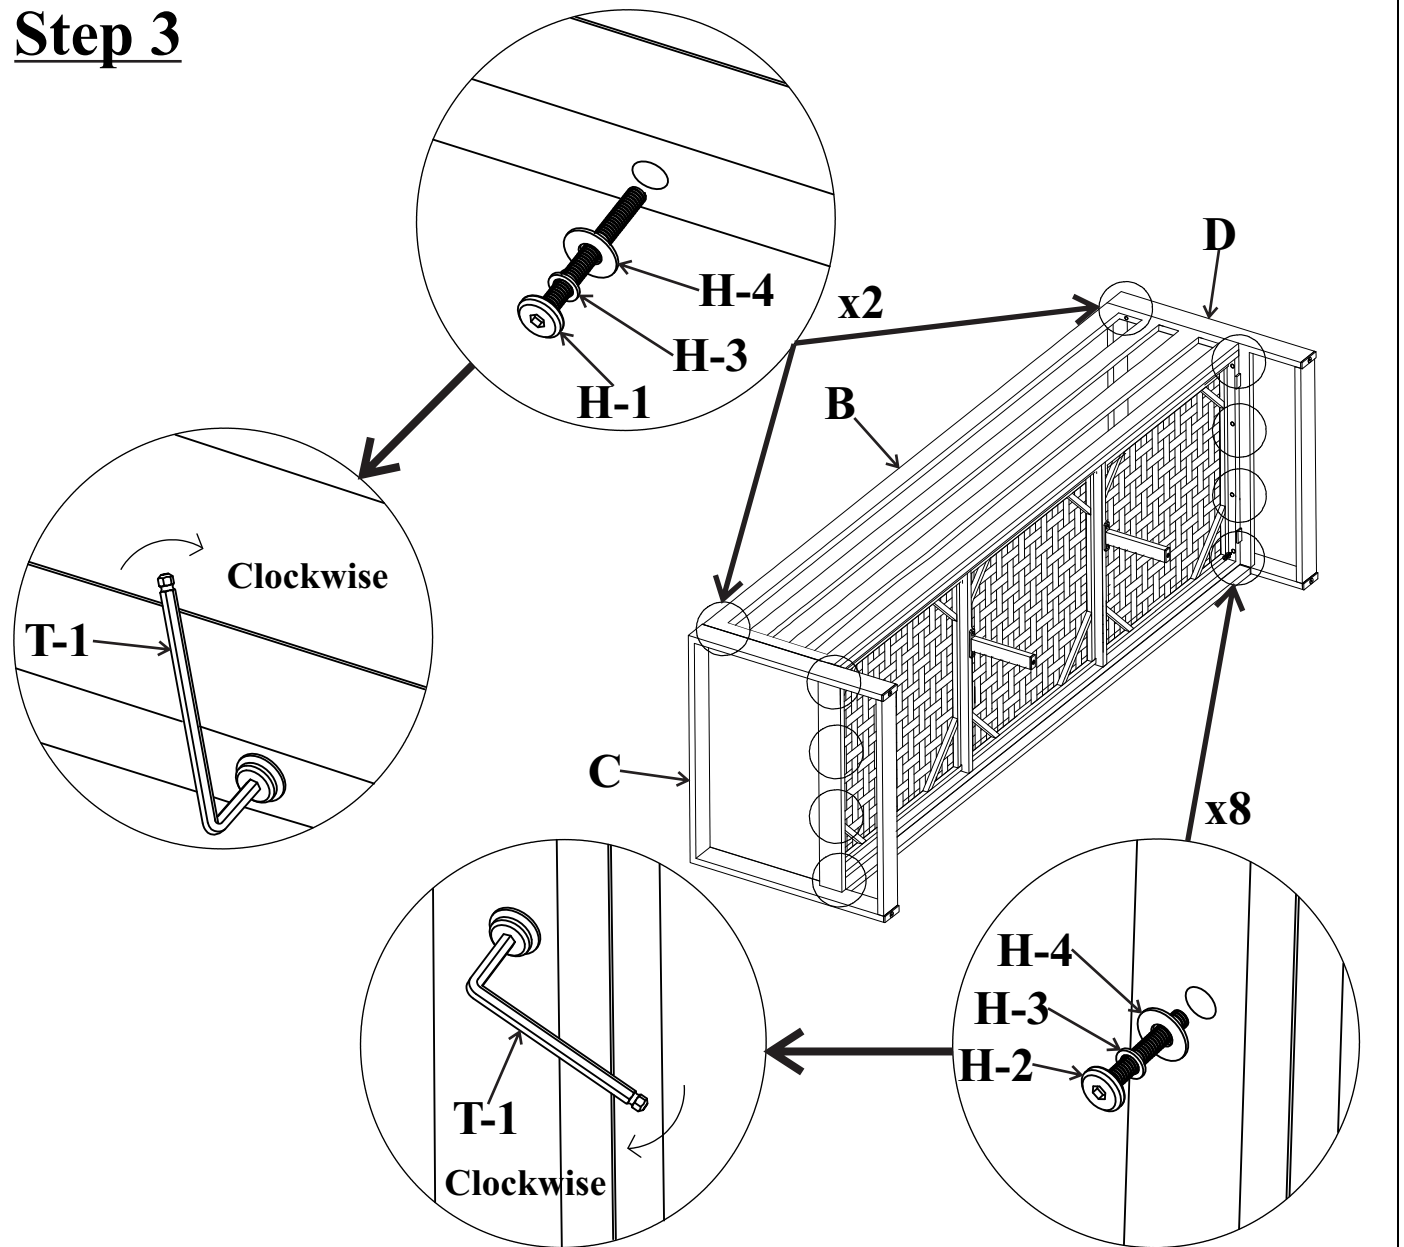

Position Right Leg (C) with Seat Frame (A) and Back Frame (B) as shown.
(Right and Left Legs (C/D) contain tabs to rest on Seat Frame (A) to help with assembly).
Secure Right Leg (C) to Seat Frame (A) using Short Allen Bolts (H-2), Spring Washers (H-3) and Flat Washers (H-4). Secure Right Leg (C) to Back Frame (B) using Long Allen Bolts (H-1), Spring Washers (H-3) and Flat Washers (H-4). Stack all hardware in the order as shown. Repeat same process to secure Left Leg (D) to Seat Frame (A) and Back Frame (B).
Engage all bolts first, then fully tighten them using provided Allen Key (T-1).
DO NOT OVER TIGHTEN.

Assembly

Step 4

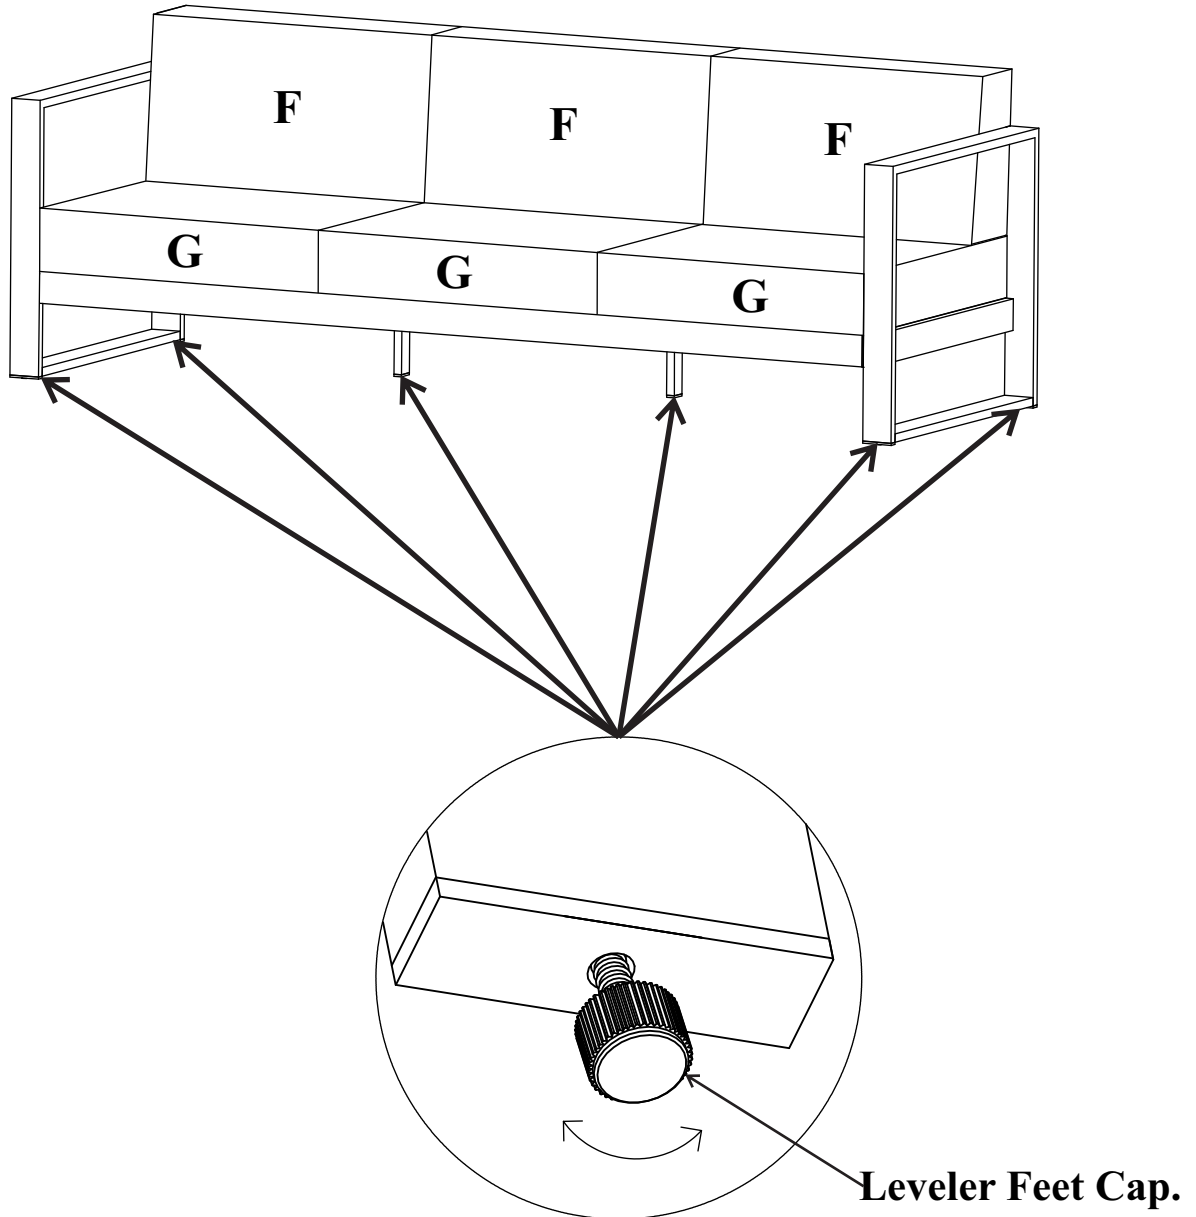 


Using a second person to assist you, turn the Bench upright. Place Seat Cushion (G) into position as shown, making sure the cushion zipper faces the back of the chair assembly.

Next, place Back Cushion (F) into position as shown, making sure the zipper faces the bottom of the chair assembly. Ensure all bolts are fully tightened. Assembly is now complete and the chair is ready for use.

NOTE: Levelers can be used for height adjustment to achieve stability only AFTER the unit is moved to the desired location. DO NOT drag the unit as this may damage the levelers or ground. Ensure all bolts are fully tightened every 3 months to ensure stability.

Care & Maintenance



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Store furniture or use an appropriate furniture cover during cold or inclement weather.



- All products sold at World Market are not for commercial use and are intended for residential use only.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.



- Stains may be removed with mild soap solution and damp cloth.

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Outdoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of purchase. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood, metal and stone/tile); complete breakage of hardwood; cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); outdoor fabric, nautical rope and woven Textilene® defects including tears, misprints, fraying, crease marks, skip stitches or open seams; synthetic resin wicker breakage or unraveling; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions:** Loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Outdoor Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as metal bases, swivel plate mechanisms; for umbrellas, canopy crank mechanism, spring loaded pole pins (for adjusting height); and other components such as bent or stripped threaded leg posts and adjustable levelers. Coverage also includes protection against rust and corrosion on hardware. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse), improper storage, stacking or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, prolonged exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products). **NOTE: As with any outdoor rated wood, the color may fade if left in direct sunlight of inclement weather. Minor cracking may occur with age. These are naturally occurring features of wood and do not affect product performance.**
 - b. **Fabric (Including Sunbrella® Fabrics), Rope, Textilene®, All-Weather Wicker:** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to fire, high heat, water, or prolonged exposure to direct sunlight that may cause splitting, peeling, fraying or discoloration with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to prolonged environmental/inclement weather exposure such as direct sunlight, extreme heat, water or extreme humidity, strong winds, any bright light source (natural or artificial), chlorine or saltwater pools, or any environment that the product is not intended for. We HIGHLY recommend storing furniture, umbrellas and cushions with outdoor rated furniture covers and out of direct exposure during the winter or inclement weather events.
4. This warranty is applicable for outdoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.

(OUTDOOR FURNITURE 1LW_v1.3_051122)