


WORLD MARKET®

Assembly Instructions

Hadden Arch Bar Cabinet











SKU 635221, 635222

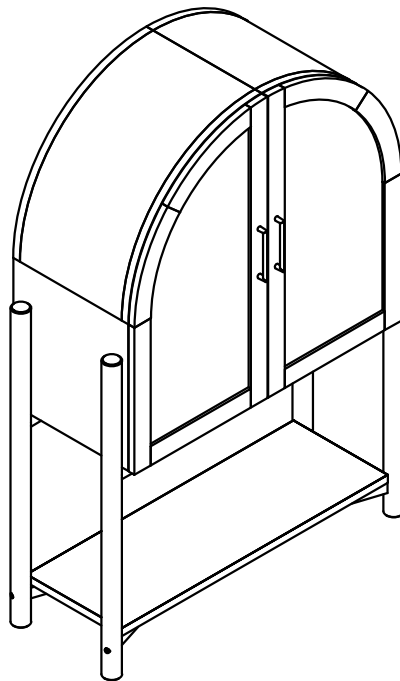









Thank you for your purchase. If you have any questions pertaining to the assembly of this furniture piece, please contact the nearest World Market store. If you are not near a store, please call our customer service call center toll free at 877-967-5362 for assistance.

ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT
FOR COMMERCIAL USE AND ARE INTENDED FOR
RESIDENTIAL USE ONLY


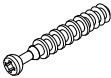
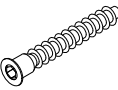
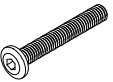


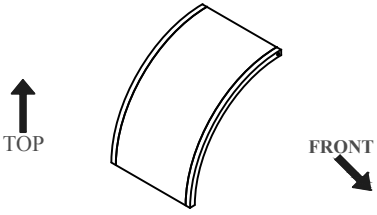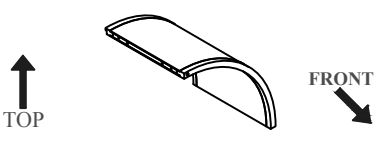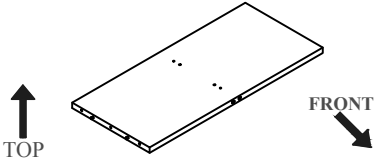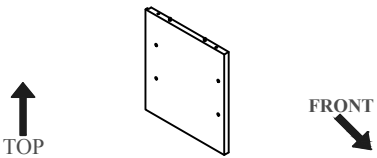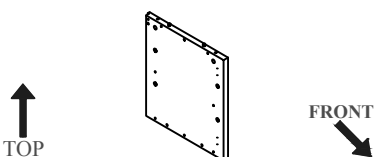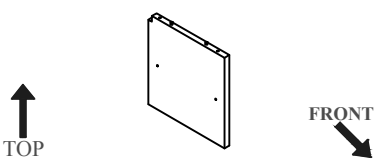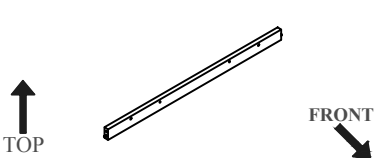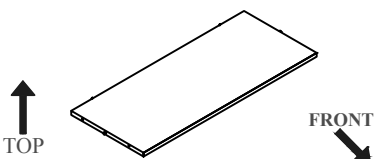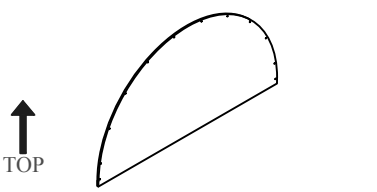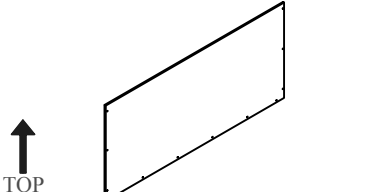

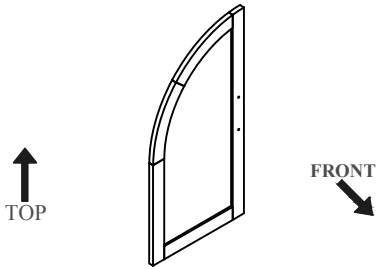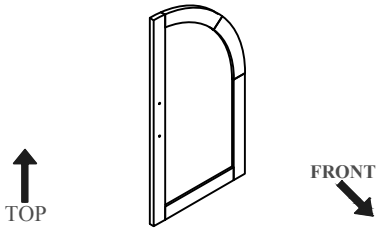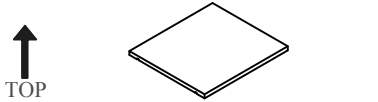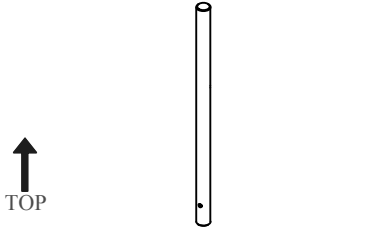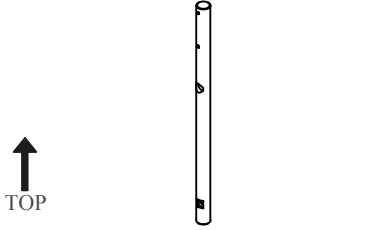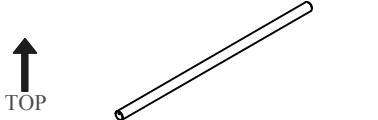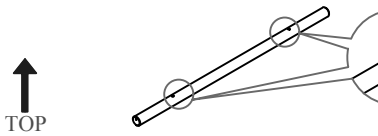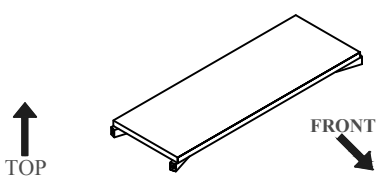


 


Component List

LABEL	PICTURE	DESCRIPTION	QTY.
A-1		Left Top Frame	1
A-2		Right Top Frame	1
B		Bottom Panel	1
C-1		Left Side Panel	1
C-2		Right Side Panel	1
D		Divider Panel	1
E		Horizontal Back Frame	1
F		Fixed Shelf	1
G-1		Upper Back Panel	1
G-2		Lower Back Panel	1






Component List

LABEL	PICTURE	DESCRIPTION	QTY.
I-1	 <p>Diagram of the left door frame, showing a curved top edge. An arrow labeled 'TOP' points upwards, and an arrow labeled 'FRONT' points downwards and to the right.</p>	Left Door Frame	1
I-2	 <p>Diagram of the right door frame, showing a curved top edge. An arrow labeled 'TOP' points upwards, and an arrow labeled 'FRONT' points downwards and to the right.</p>	Right Door Frame	1
J	 <p>Diagram of a flat, rectangular removable shelf.</p>	Removable Shelf	2
K-1	 <p>Diagram of a long, thin vertical leg with a small hole near the bottom.</p>	Leg 1	2
K-2	 <p>Diagram of a long, thin vertical leg with a small hole near the bottom, similar to Leg 1 but with a different hole placement.</p>	Leg 2	2
L	 <p>Diagram of a long, thin horizontal frame piece.</p>	Front Horizontal Frame	1
M	 <p>Diagram of a long, thin horizontal frame piece with a circular detail showing a hole and a small protrusion.</p>	Back Horizontal Frame	1
N	 <p>Diagram of a rectangular bottom shelf with a beveled edge. An arrow labeled 'TOP' points upwards, and an arrow labeled 'FRONT' points downwards and to the right.</p>	Bottom Shelf	1


Hardware List

LABEL	PICTURE	DESCRIPTION	QTY.
H-1		Cam lock Ø15 mm	22
H-2		Cam Screw	22
H-3		Connecting Screw M7 x 50 mm	2
H-4		Short Allen Bolt M6 x 40 mm	8
H-5		Medium Allen Bolt M6 x 50 mm	2
H-6		Long Allen Bolt M6 x 60 mm	4
H-7		Lock Washer Ø6 x Ø10.5 x T2 mm	14
H-8		Medium Flat Washer Ø6 x Ø13 x T2 mm	14
H-9		Large Flat Washer Ø6 x Ø19 x T2 mm	5
H-10		Short Pan head Screw M3.5 x 15mm	29
H-11		Long Pan head Screw M4 x 50 mm	4
H-12		Shelf Pin Ø6 x 26 x 3 mm	8
H-13		Handle Bolt M4 x 30 mm	4
H-14		Small Flat Washer Ø5 x Ø10 x T1 mm	4

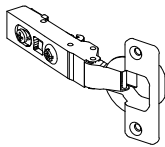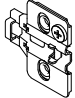Hardware List


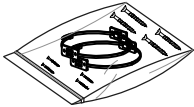
LABEL	PICTURE	DESCRIPTION	QTY.
H-15		Concealed Hinge - Full Overlay	4
H-16		Mounting Plate	4
H-17		Screw M3.5 x 15 mm	16
H-18		Handle 168 x 28 mm	2
H-19		Anti Tip-kit	1

Tool List

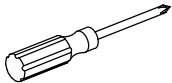LABEL	PICTURE	DESCRIPTION	QTY.
T-1		Allen Key 4 x 110 x 30 mm	1
T-2		Phillips Screwdriver (Not Included)	1
T-3		Triangle	1

Assembly Preparation

Before Beginning:

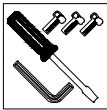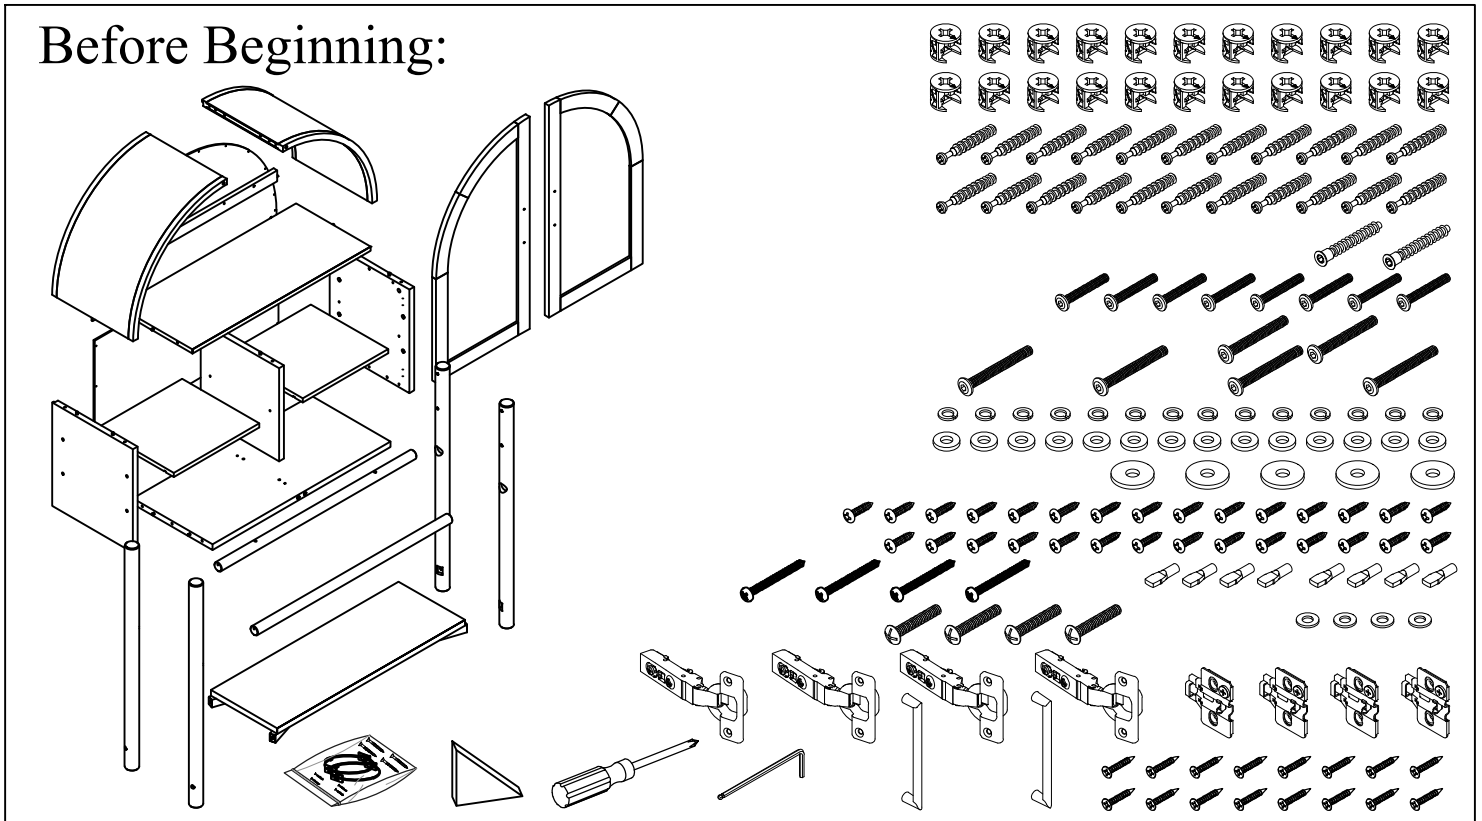

Unpack all hardware bags and components to ensure you have all parts. Take note of bolt hardware size differences and components that may have directional labels (Example: TOP or FRONT).




Read the assembly instructions, cover-to-cover. Save any **Care and Maintenance** instructions pages for after the assembly has been completed.




It is always recommended to have 2 adults on hand for assembly.



Do not assemble on hard, abrasive flooring or carpeted surfaces that can damage or get caught in the components during assembly.

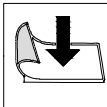

Assemble on a clean non-marring surface (such as the product's packing foam).

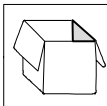

Do not discard any packaging until the product has been fully assembled.




In case of missing parts, please contact your nearest World Market store or call our customer service call center at 1-877-967-5362.



WARNING: Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.

Assembly Steps

Step 1

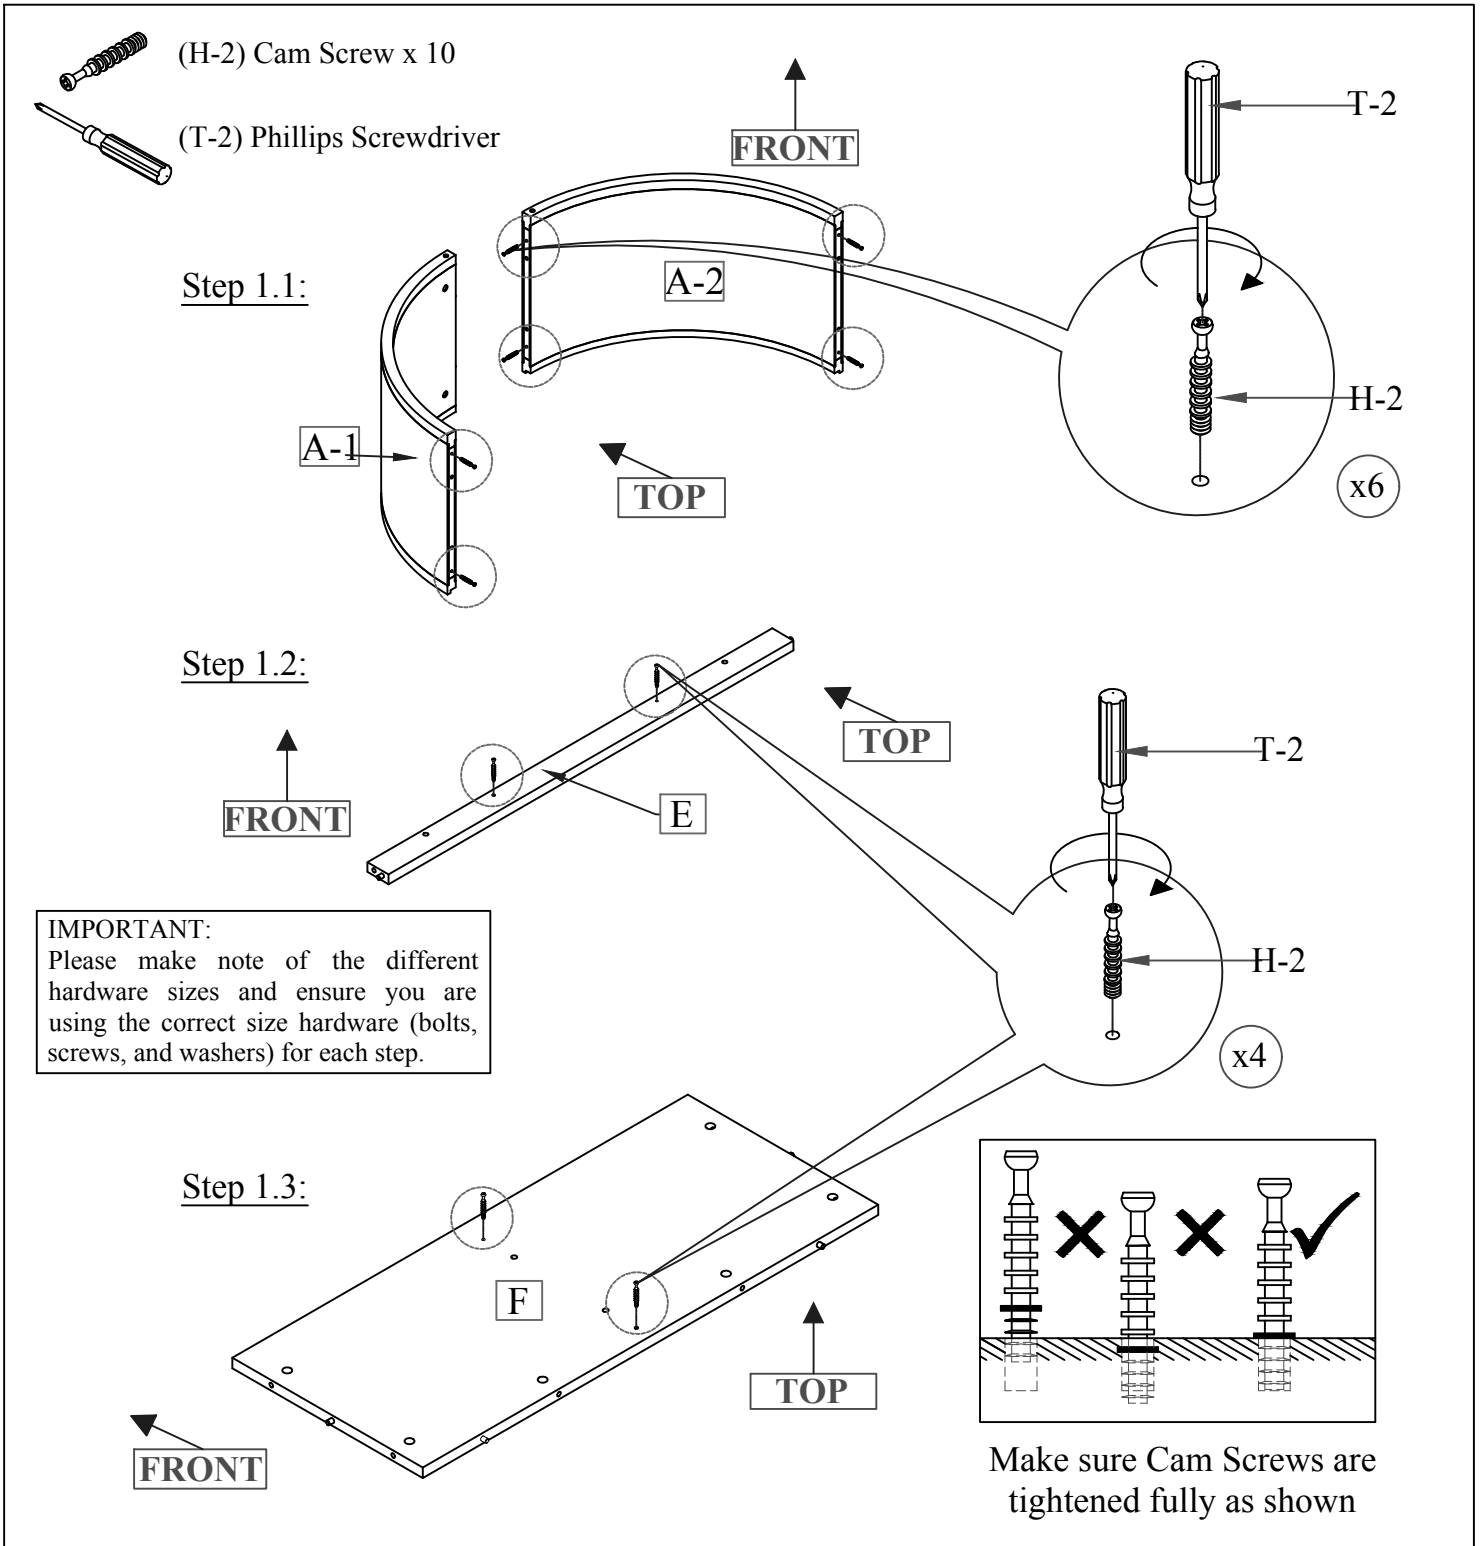
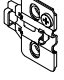

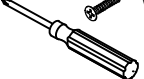



Step 1.1: Place Left Top Frame (A-1) and Right Top Frame (A-2) on their front edges onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Left/ Right Top Frame (A-1/A-2) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above. **DO NOT OVER TIGHTEN.**

Step 1.2: Lay the Horizontal Back Frame (E) onto a padded, non marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Horizontal Back Frame (E) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above. **DO NOT OVER TIGHTEN.**

Step 1.3: Place Fixed Shelf (F) onto a padded, non marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Fixed Shelf (E) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above. **DO NOT OVER TIGHTEN.**

Step 2


-  (H-2) Cam Screw x 12
-  (H-16) Mounting Plate x 4
-  (H-17) Screw x 8
-  (T-2) Phillips Screwdriver

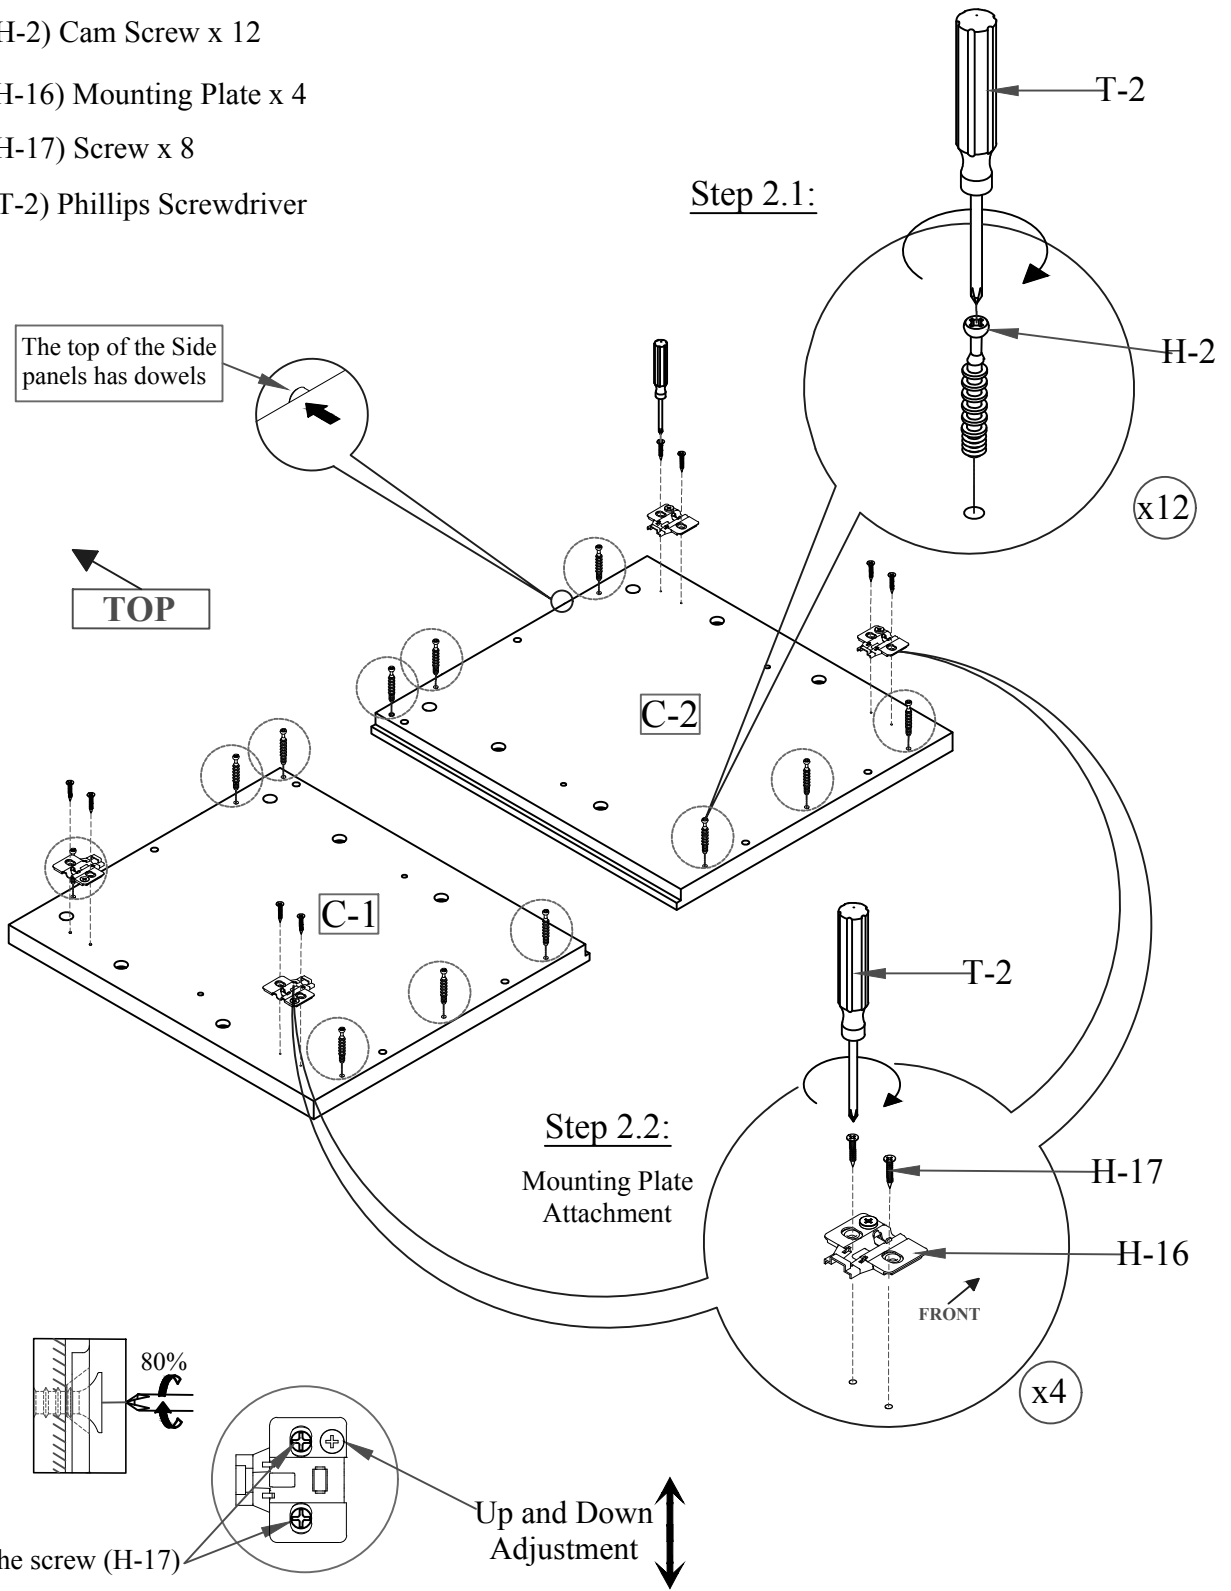

Step 2.1: Lay the Left Side Panel (C-1) and Right Side Panel (C-2) onto a padded, non marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Left/ Right Side Panel (C-1/C-2)) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above. **DO NOT OVER TIGHTEN.**

Step 2.2: Position Mounting Plates (H-16) to the Left Side Panel (C-1) with vertical adjustment screws facing toward the center. The Screws (H-17) have room for movement within the Mounting Plate (H-16). Ensure they are centered. Secure Screws (H-17) using Phillips Screwdriver (T-2, not included) Fully tighten, being careful not to over tighten. Repeat to install the Mounting Plates (H-16) to Right Side Panel (C-2).

Step 3

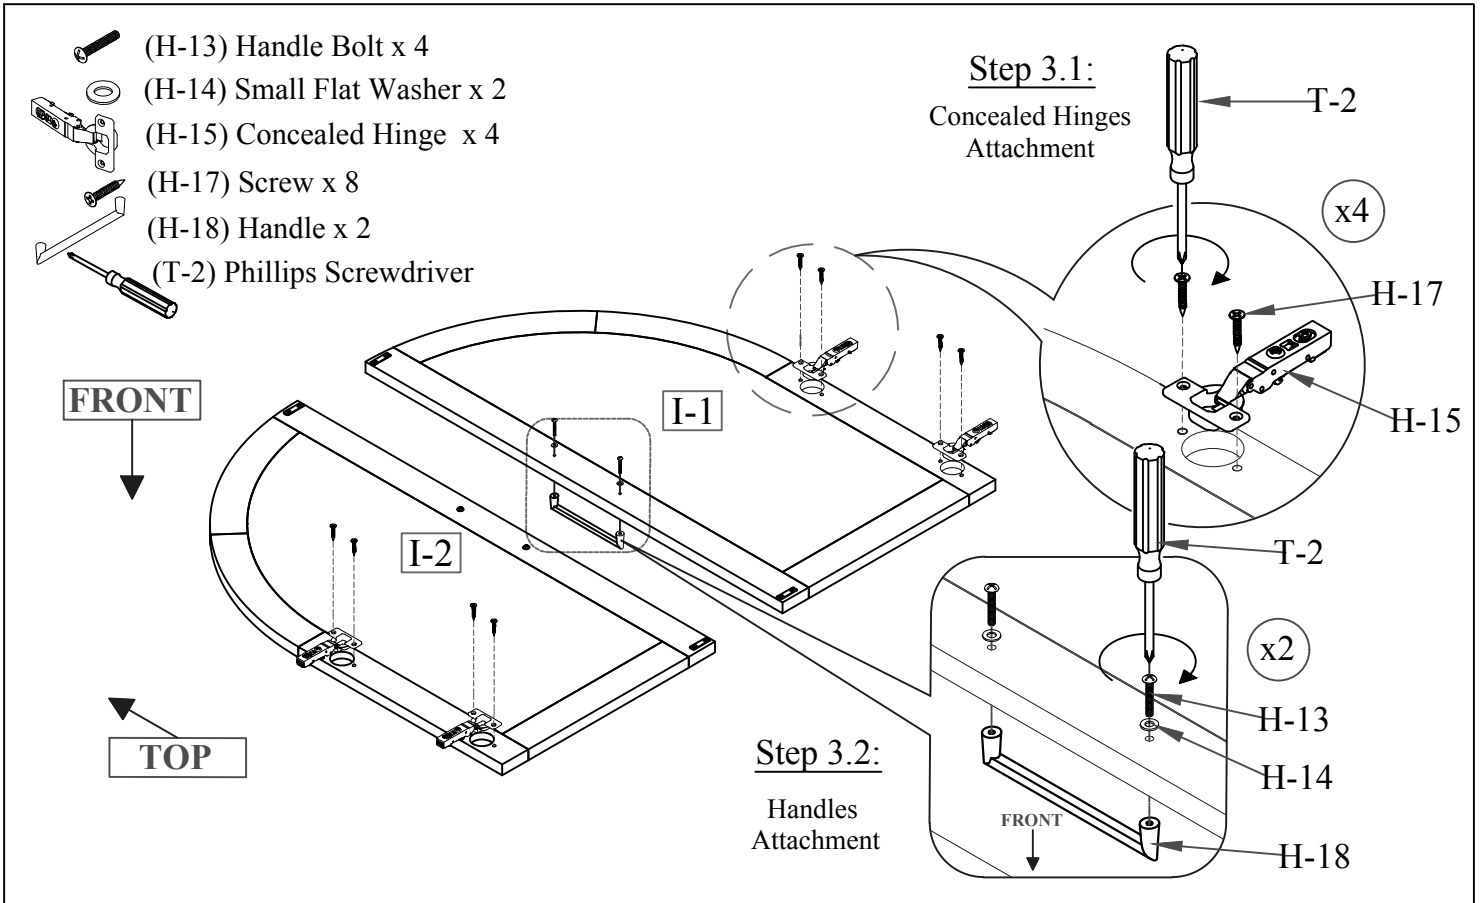


Step 3.1: Position and secure Concealed Hinges (H-15) to Left and Right Door Frame (I-1/I-2) with Screws (H-17) using Phillips Screwdriver (T-2). Be sure groove is aligned with edge of the door (facing away from the center of the door). Fully tighten, being careful not to over tighten.

Step 3.2: Position Handles (H-18) to Left/ Right Doors Frame (I-1/I-2), ensuring the handle is oriented to the front of the door. Secure each Handles (H-18) with Handle Bolts (H-13) and Small Flat Washer (H-14) using Phillips Screwdriver (T-2; not included), stacking the hardware in the order as shown. DO NOT over tighten.


Note: If needed, temporarily stand up the Left/ Right Door Frame (I-1/I-2) to assemble the Handles (H-18).

Step 4

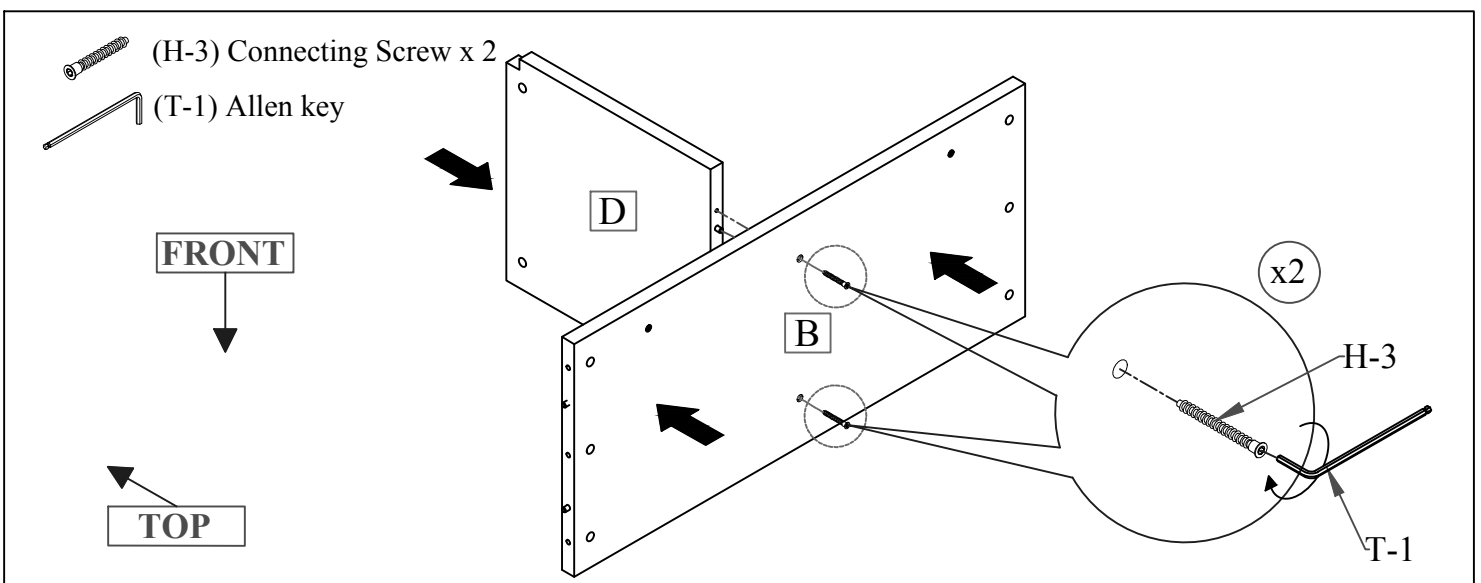


Using a second person to assist you, install and secure Bottom Panel (B) to Divider Panel (D) using Connecting Screws (H-3), ensuring both components are oriented correctly. Engage all screws before fully tightening using Allen Key (T-1). Do not over tighten.

Step 5

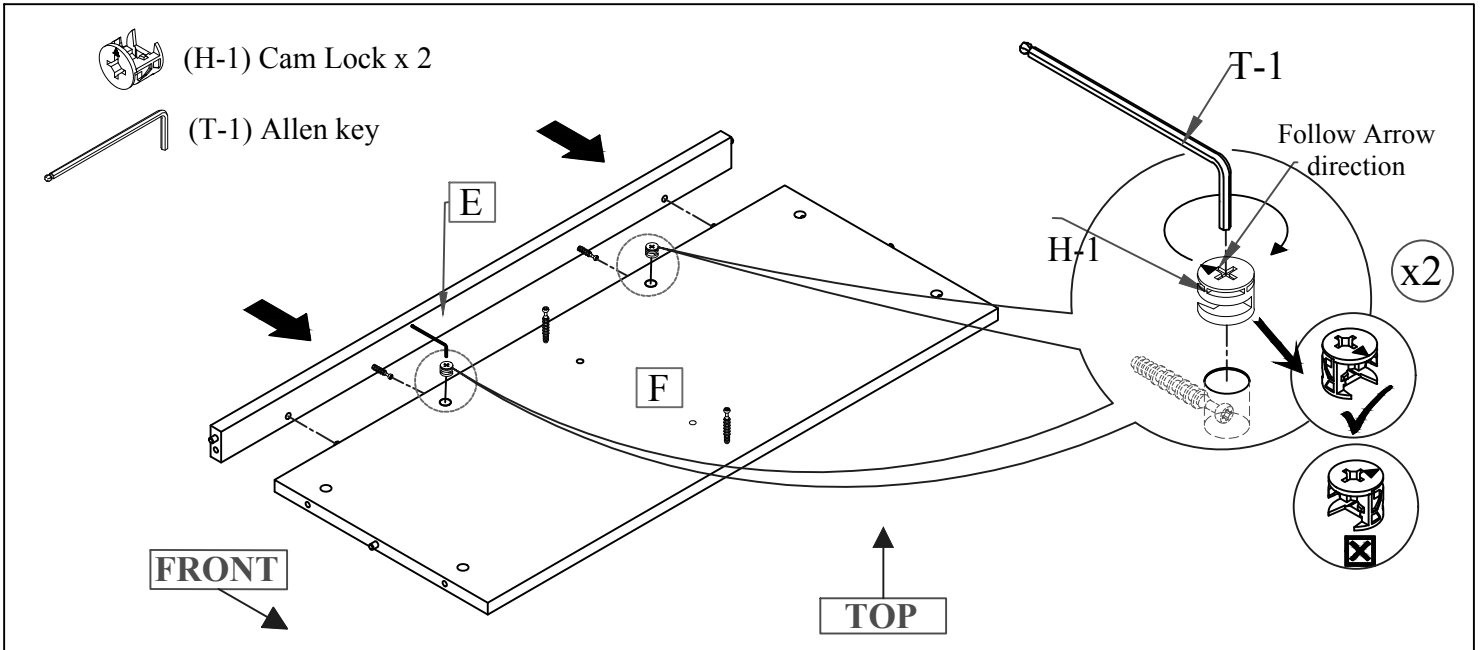


Position the Horizontal Back Frame (E) with the Fixed Shelf (F) by inserting the pre-installed Cam Screws (H-2) and dowels into the corresponding holes. Insert Cam Locks (H-1) into the Fixed Shelf (F) following the orientation directions above. The arrow on the Cam Lock (H-1) must point towards the Cam Screw (H-2) when first inserting. Once positioned, fully tighten all Cam Locks (H-1) by turning clockwise using Allen Key (T-1) until they are snug. **DO NOT** over tighten.

Step 6

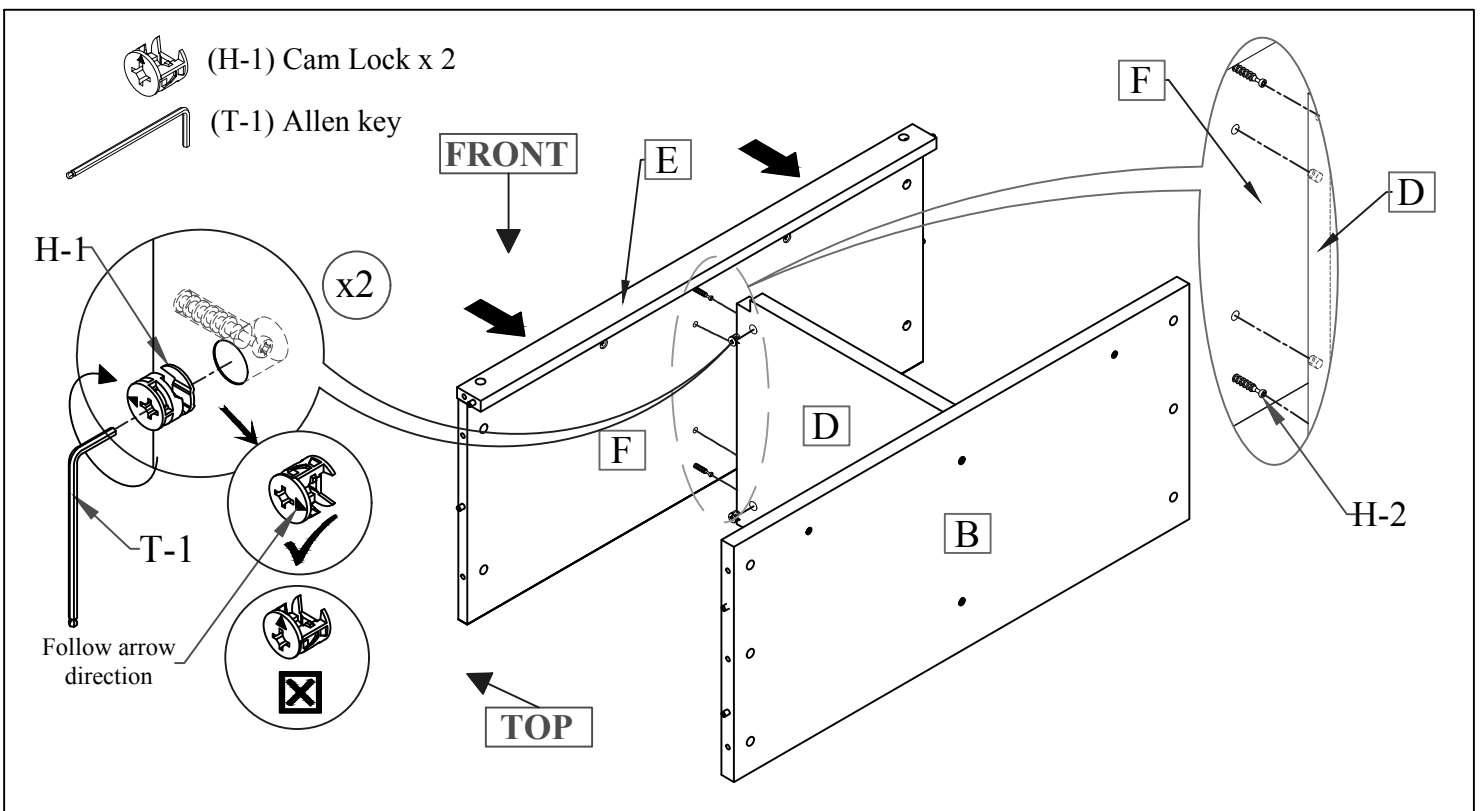


Using a second person to assist you, carefully position Fixed Shelf (F) onto the assembly. Align all of the Cam Screws (H-2), installed in Step 1, and dowels with their corresponding holes on Divider Panel (D) following the orientation directions above. Insert Cam Locks (H-1) into the Divider Panel (D). The arrow on the Cam Lock (H-1) must point towards the Cam Screw (H-2) when first inserting the Cam Lock. Once confirmed, fully tighten all Cam Locks (H-1) by turning clockwise using Allen Key (T-1) until they are snug.

Step 7

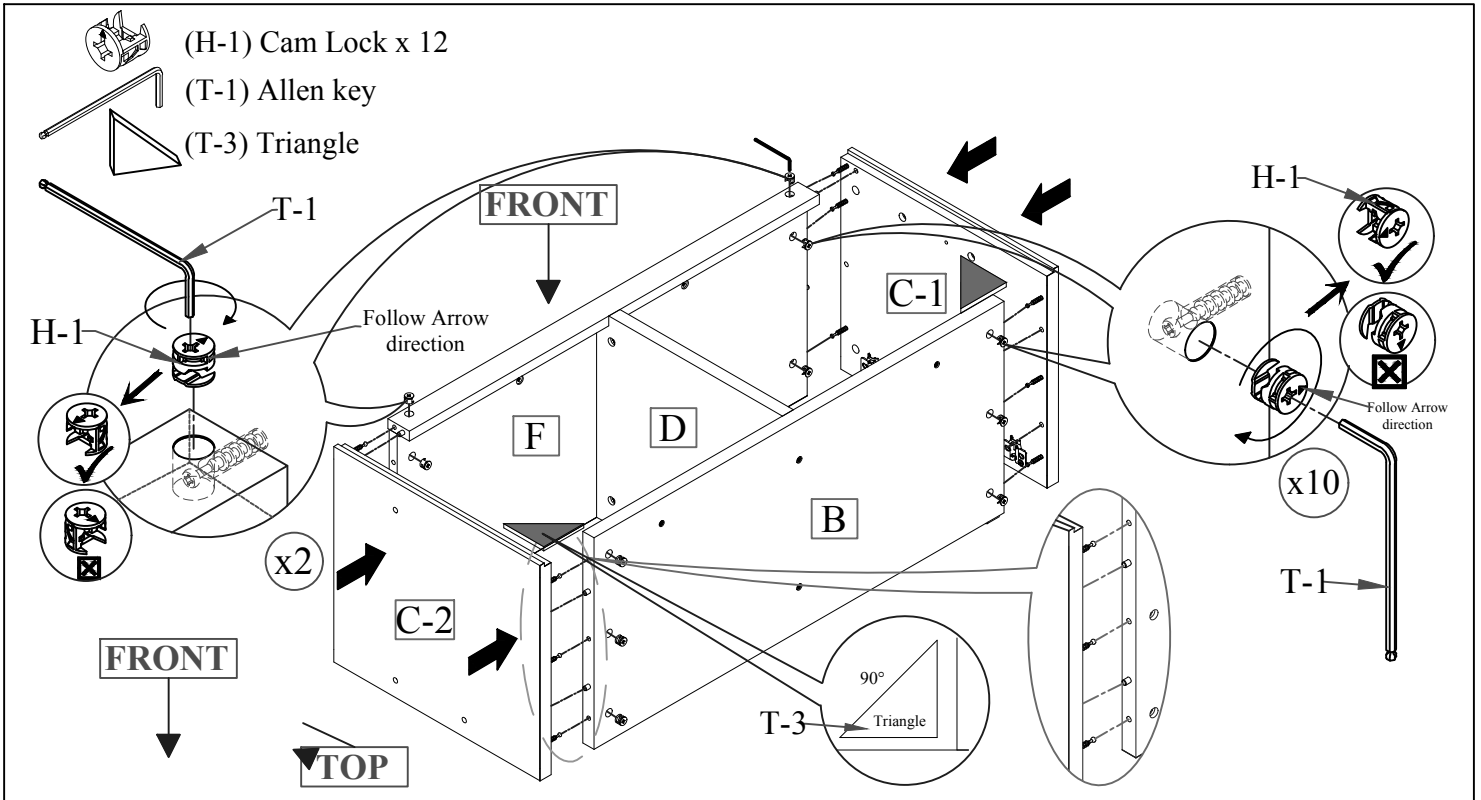


Using a second person to assist you, carefully position Left Side Panel (C-1) and Right Side Panel (C-2) onto the assembly. Align all of the Cam Screws (H-2), installed in Step 1, and dowels with their corresponding holes in Bottom Panel (B) and Fixed Shelf (F) following the orientation directions above. Insert Cam Locks (H-1) into the Fixed Shelf (F) and Bottom Panel (B). The arrow on the Cam Lock (H-1) must point towards the Cam Screw (H-2) when first inserting the Cam Lock. Once confirmed, fully tighten all Cam Locks (H-1) by turning clockwise using Allen Key (T-1) until they are snug. DO NOT over tighten. Check that the cabinet is square (90 degree) using the Triangle (T-3).

Step 8

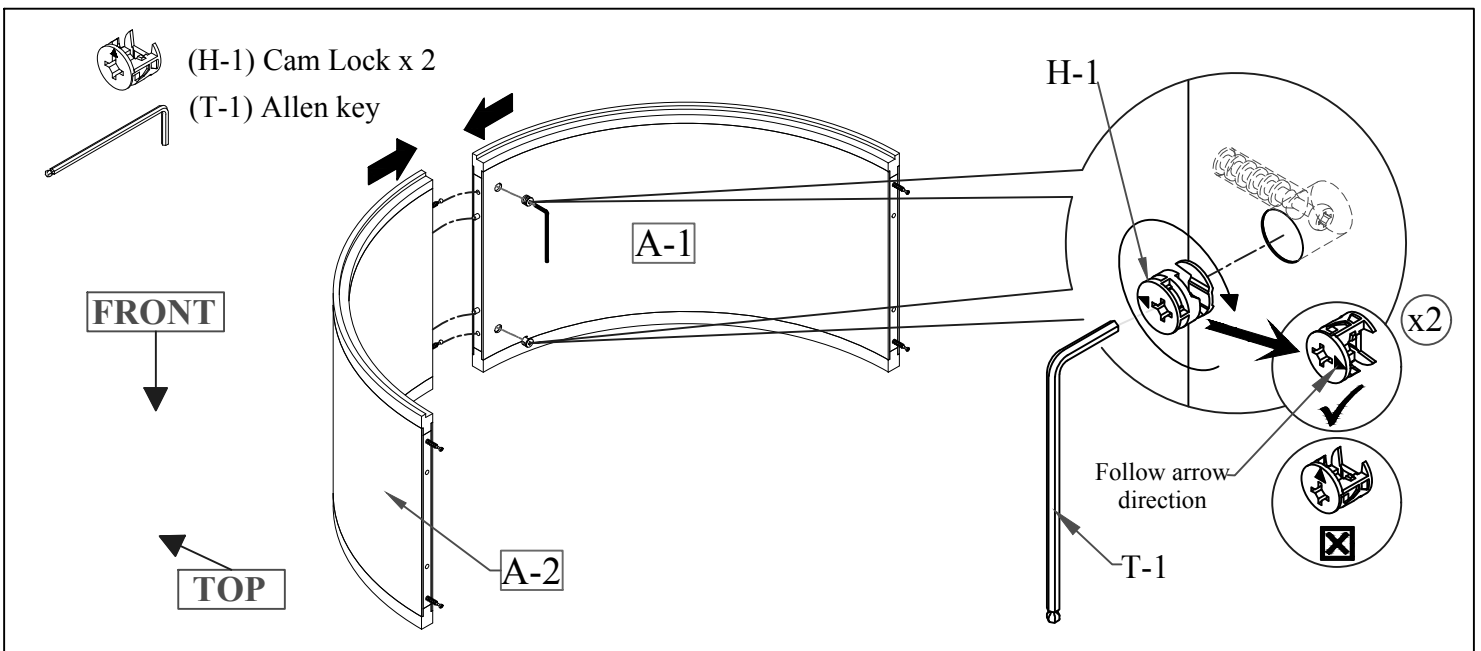


There are a total of 2 Cam Locks (H-1) to install into the corresponding holes along Left/ Right Top Frame (A-1/A-2) as illustrated. Make sure arrows on Cam Locks point to the screw upon insertion. Secure all Cam Locks (H-1) using Allen Key (T-1), turning them clockwise until they are snug. DO NOT OVERTIGHTEN the Cam Locks.

Step 9

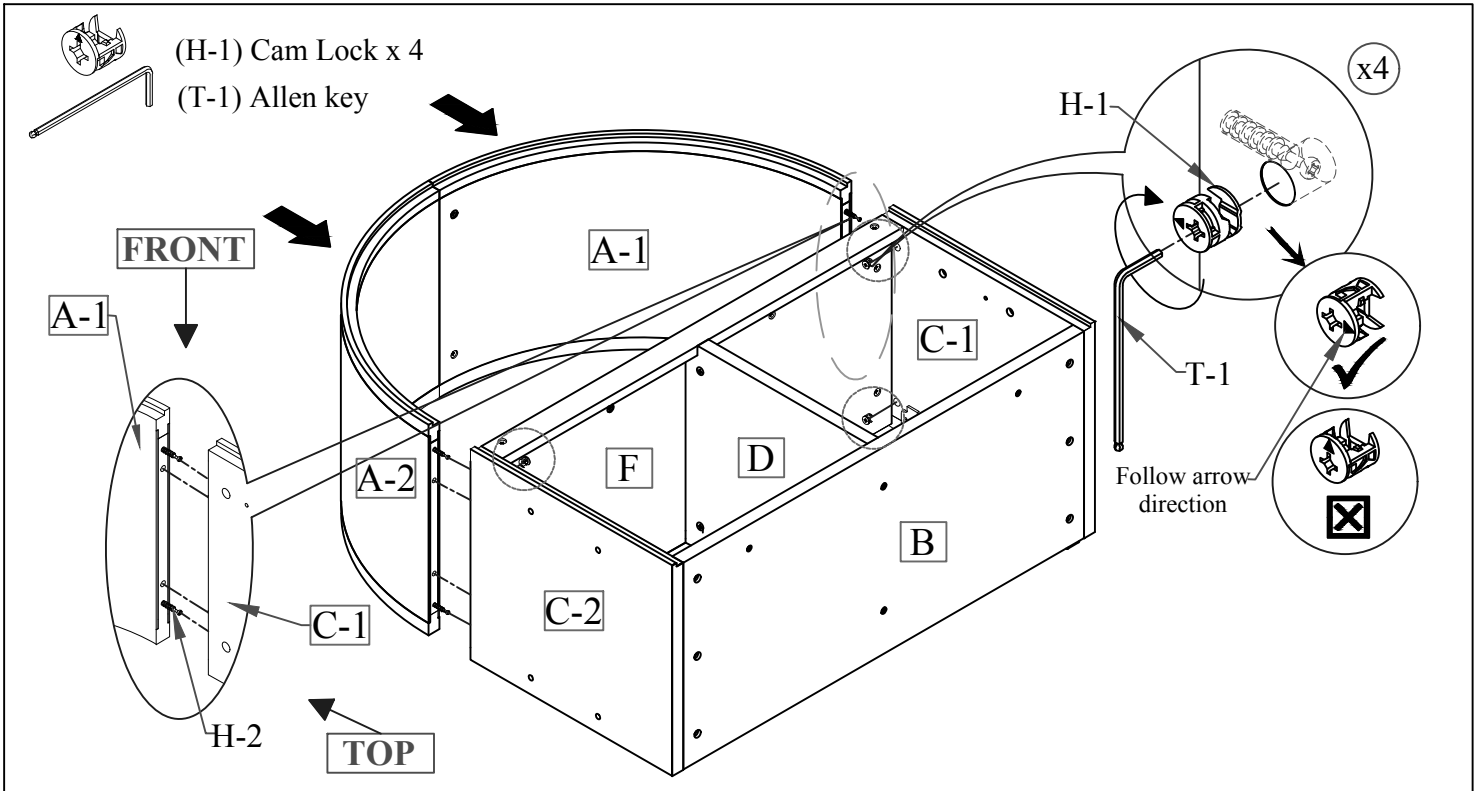


Using a second person to assist you, carefully position Left/ Right Top Frame (A-1/A-2) onto the assembly. Align all of the cam screws (installed in Step 1) with their corresponding holes on Left/ Right Side Panel (C-1/ C-2) following the orientation directions above. The arrow on the Cam Lock (H-1) must point towards the Cam Screw (H-2) when first inserting the Cam Lock. Once confirmed, fully tighten all Cam Locks (H-1) by turning clockwise using Allen Key (T-1) until they are snug. **DO NOT** over tighten Cam Locks.

Step 10

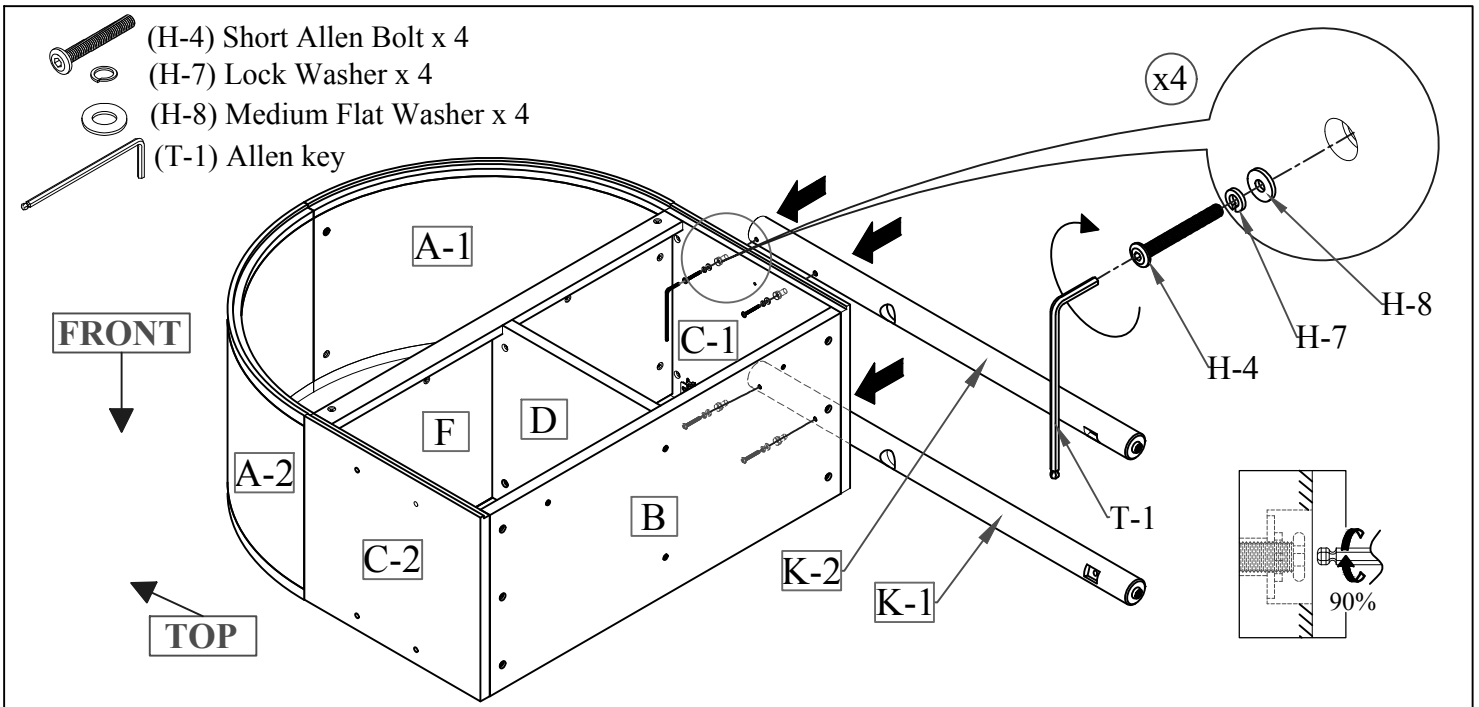


Carefully position and secure Leg 2 (K-2) and Leg 1 (K-1) to Left Side Panel (C-1) with Short Allen Bolt (H-4), Lock Washer (H-7), Medium Flat Washer (H-8) as illustrated, stacking the hardware in the order shown. Engage all bolts by hand, then fully tighten using Allen Key (T-1). **DO NOT** over-tighten Allen Bolt.
 Note: You can install Leg 1 (K-1) first to avoid entanglement, then install Leg 2 (K-2).

Step 11

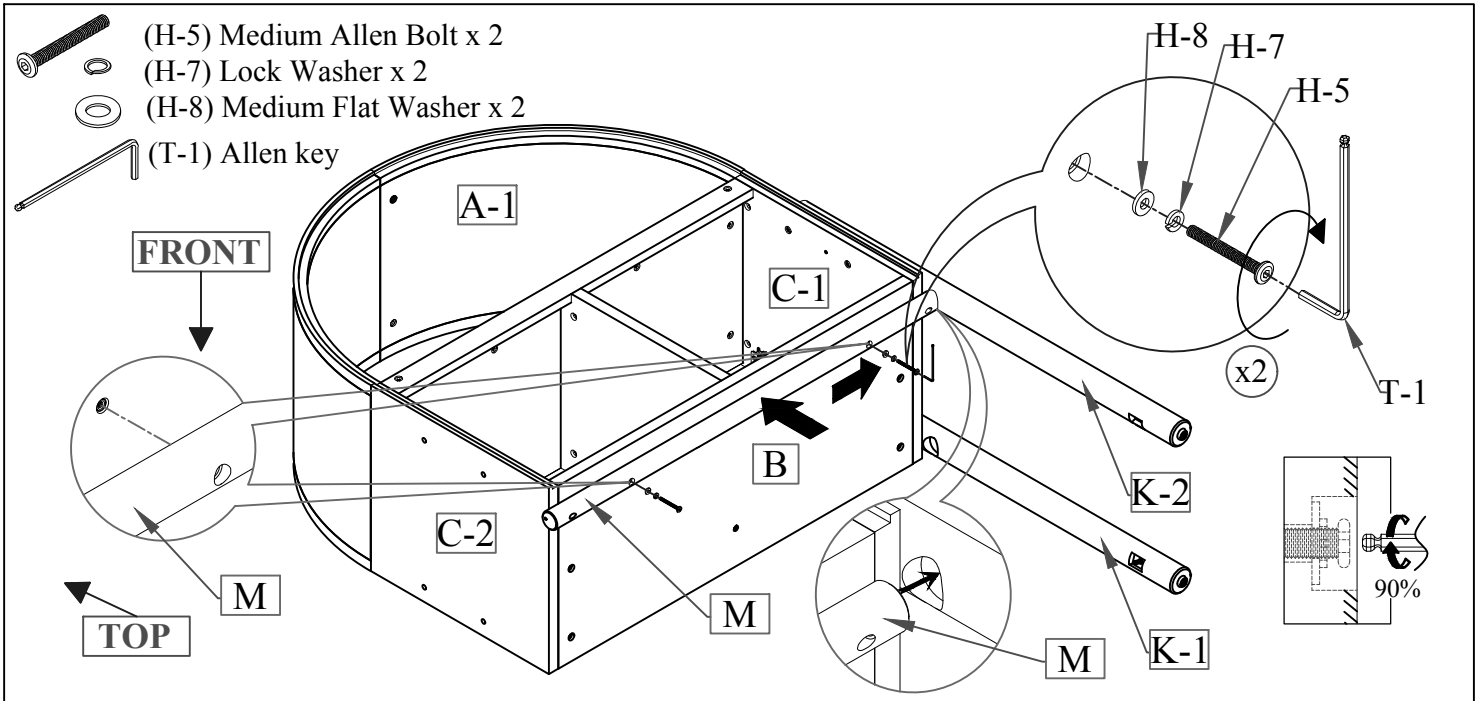

Attach Back Horizontal Frame (M) to Leg 2 (K-2) by inserting the end of Back Horizontal Frame (M) into the mortise hole on Leg 2 (K-2) following the orientation directions above. Secure Back Horizontal Frame (M) to Bottom Panel (B) with Medium Allen Bolt (H-5), Lock Washer (H-7), Medium Flat Washer (H-8) as illustrated, stacking the hardware in the order shown. Engage all bolts by hand, then fully tighten using Allen Key (T-1). DO NOT over-tighten Allen Bolt.


Step 12.1

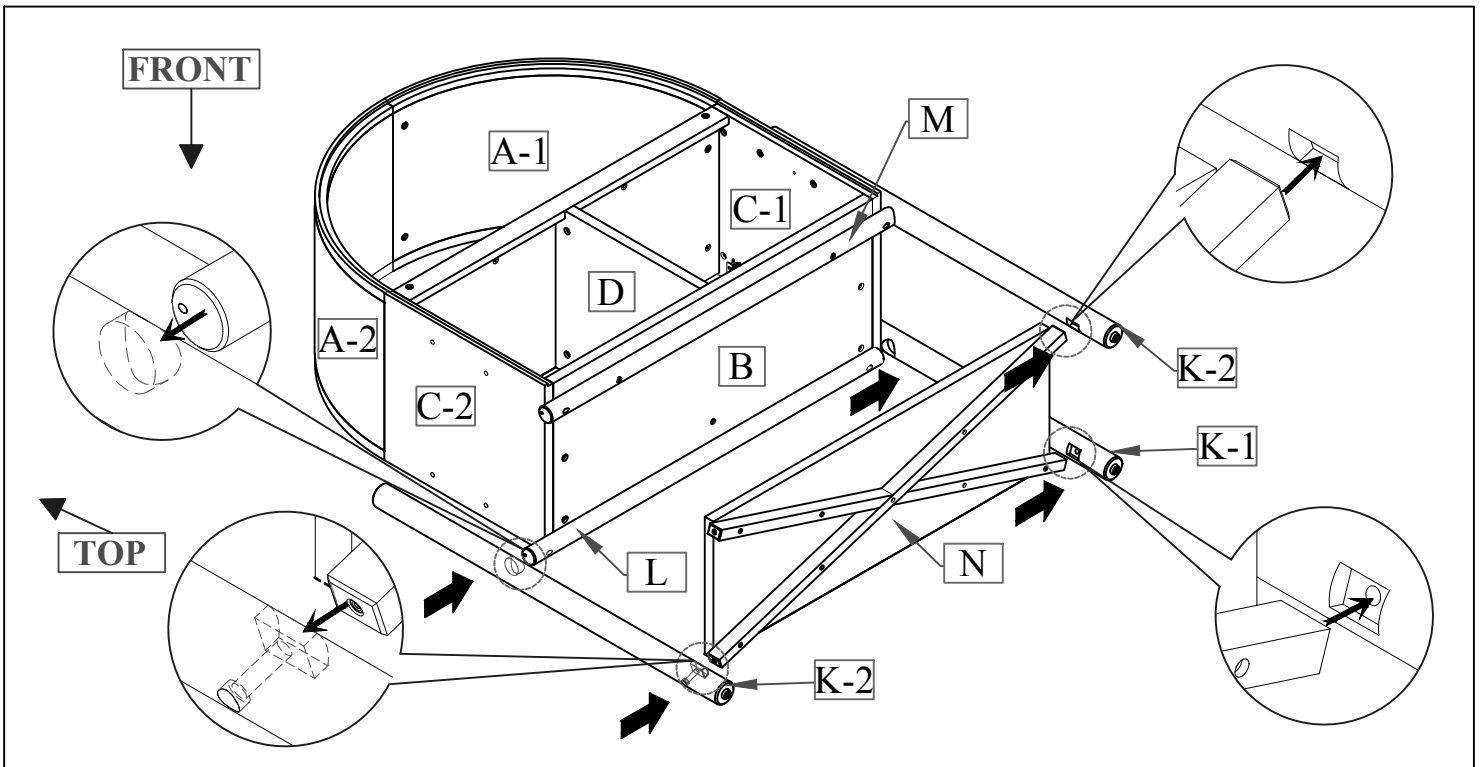

Using a second person to carefully, attach the Bottom Shelf (N) and Front Horizontal Frame (L) to Leg 2 (K-2) by inserting the end of the Bottom Shelf (N) and Front Horizontal Frame (L) into the mortise holes on Leg 2 (K-2) following the orientation directions above.


Note: Using a second person to assist you hold the Bottom Shelf (N) and Front Horizontal Frame (L) so that it does not fall over while assembling the remaining Legs. Do not yet secure assembly with Long Pan Head Screw (H-11).

Step 12.2

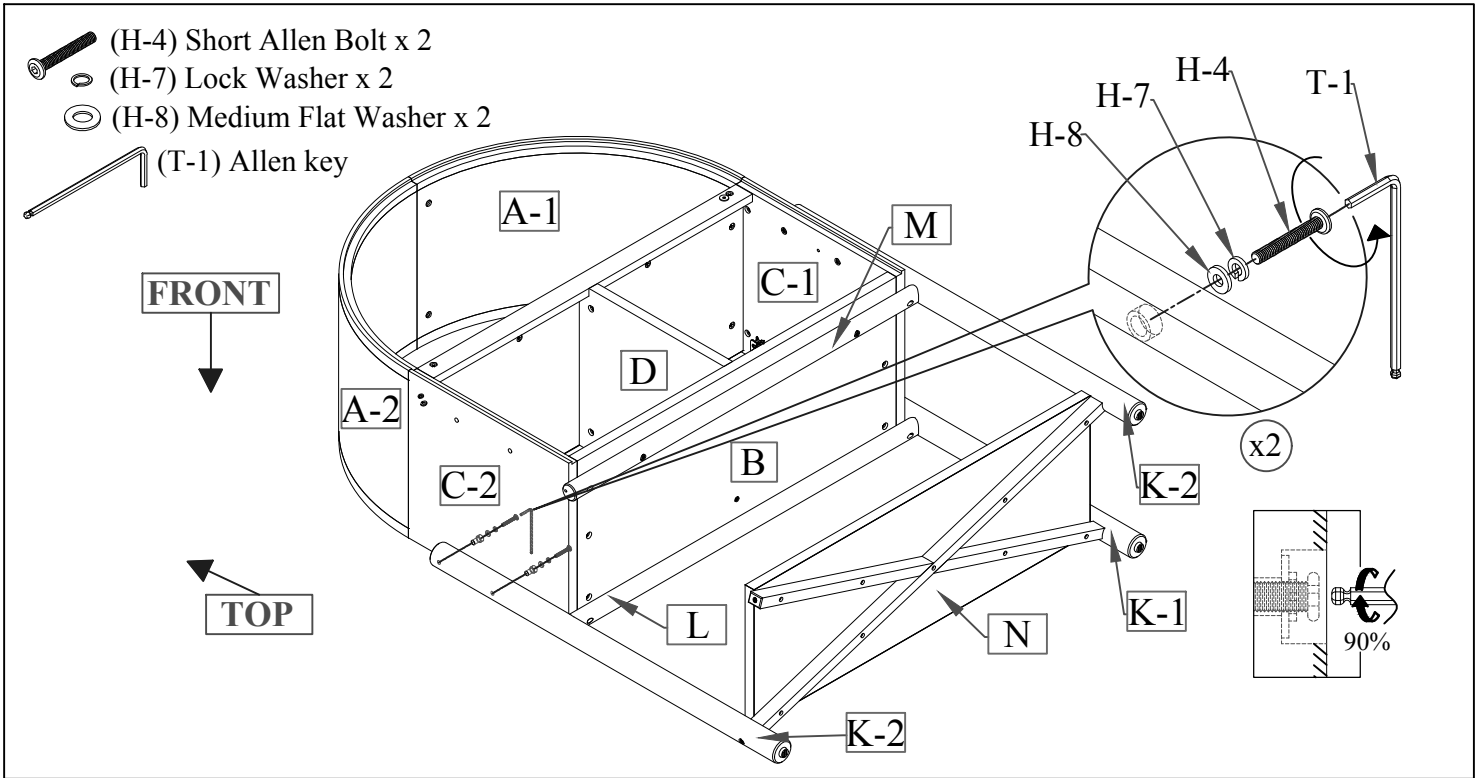


Secure Leg 2 (K-2) to Right Side Panel (C-2) with Short Allen Bolt (H-4), Lock Washer (H-7), Medium Flat Washer (H-8) as illustrated, stacking the hardware in the order shown. Engage all bolts by hand, then fully tighten using Allen Key (T-1). DO NOT over-tighten Allen Bolt.

Step 12.3

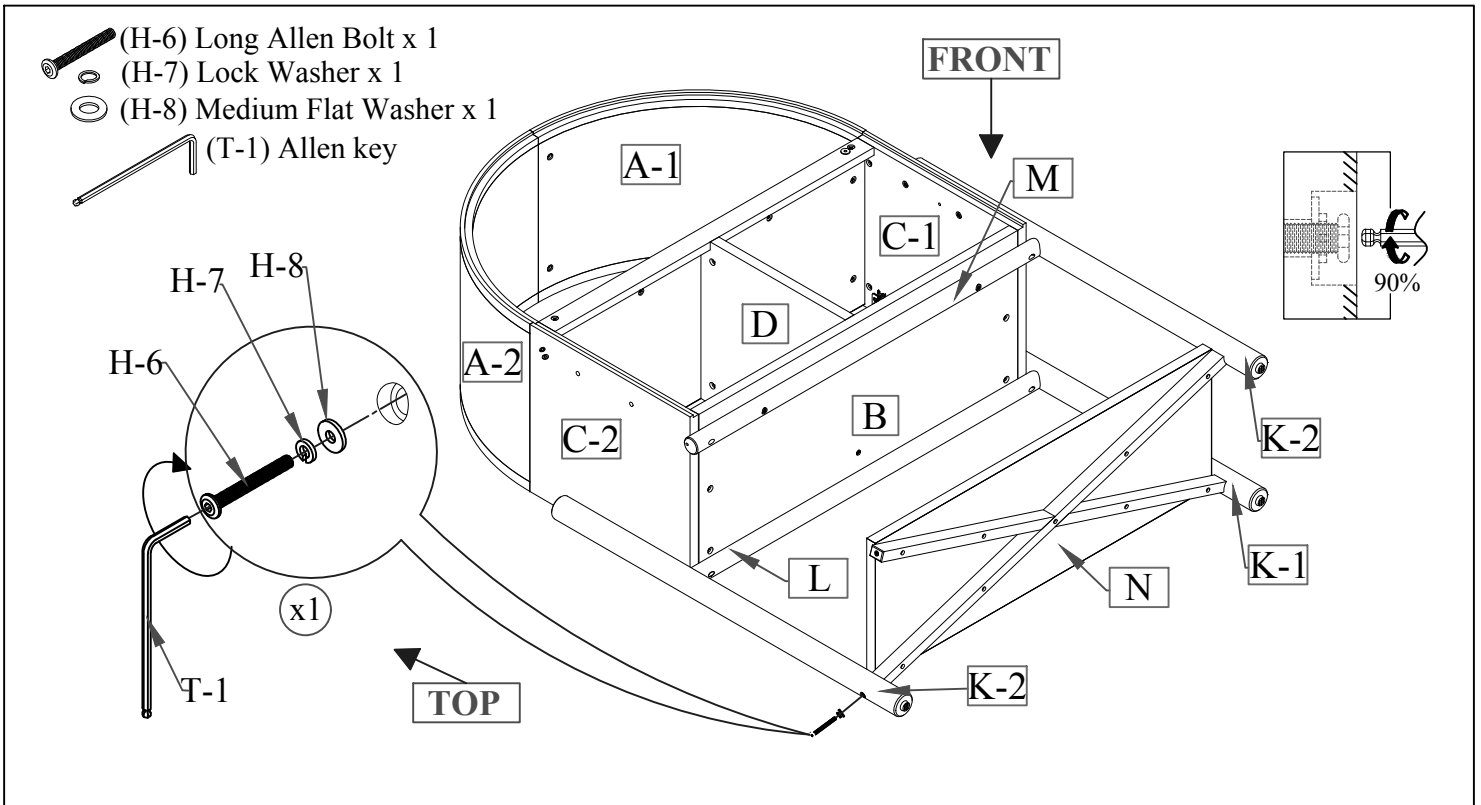


Secure Leg 2 (K-2) to Bottom Shelf (N) with Long Allen Bolt (H-6), Lock Washer (H-7), Medium Flat Washer (H-8) as illustrated, stacking the hardware in the order shown. Engage all bolts by hand, then fully tighten using Allen Key (T-1). DO NOT over-tighten Allen Bolt.

Step 13.1

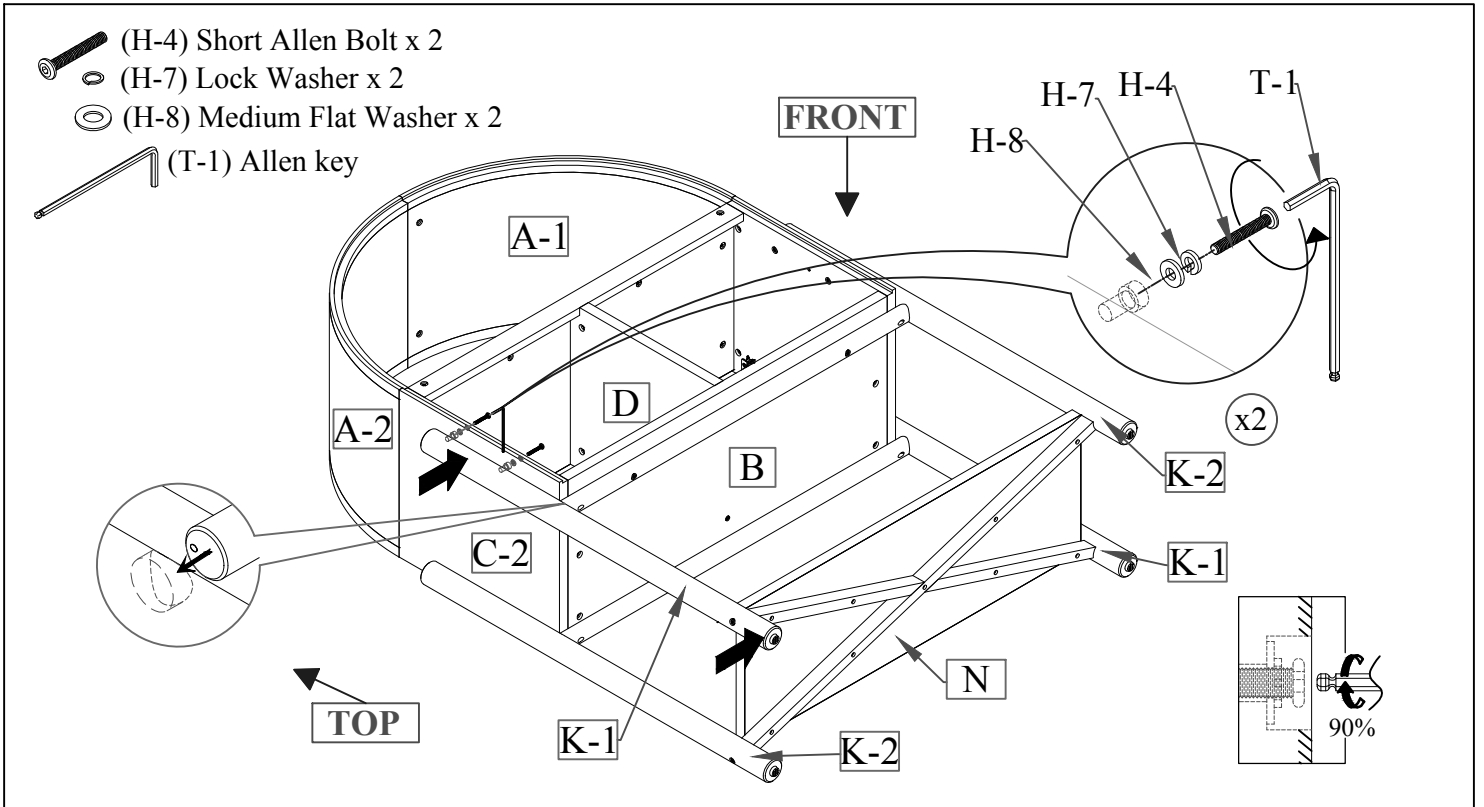


Secure Leg 1 (K-1) to Right Side Panel (C-2) with Short Allen Bolt (H-4), Lock Washer (H-7), Medium Flat Washer (H-8) as illustrated, stacking the hardware in the order shown. Engage all bolts by hand, then fully tighten using Allen Key (T-1). DO NOT over-tighten Allen Bolt.

Step 13.2

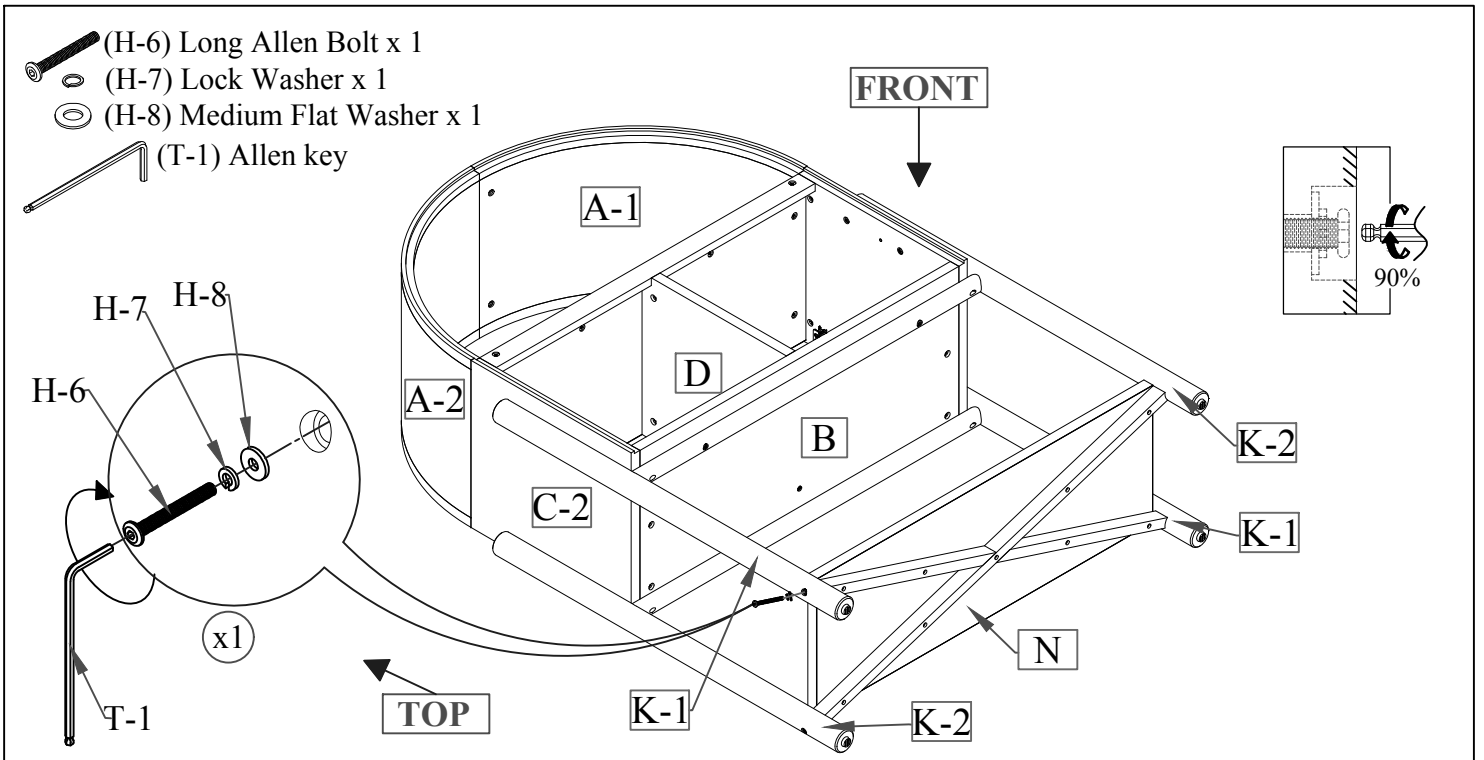


Secure Leg 1 (K-1) to Bottom Shelf (N) with Long Allen Bolt (H-6), Lock Washer (H-7), Medium Flat Washer (H-8) as illustrated, stacking the hardware in the order shown. Engage all bolts by hand, then fully tighten using Allen Key (T-1). DO NOT over-tighten Allen Bolt.

Step 14

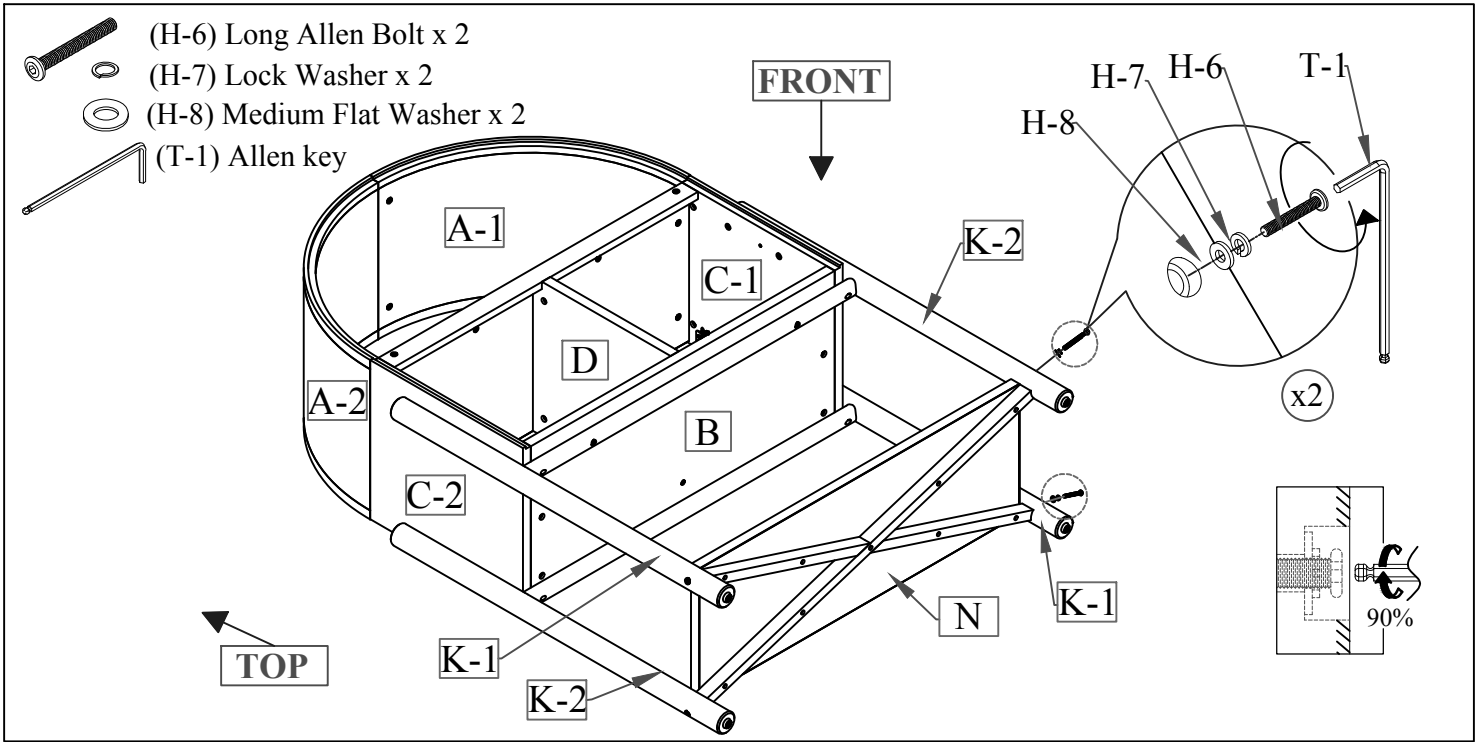


Secure Bottom Shelf (N) to Leg 1 (K-1) and Leg 2 (K2) using Short Allen Bolt (H-4), Lock Washer (H-7), Medium Flat Washer (H-8) as illustrated, stacking the hardware in the order shown. Engage all bolts by hand, then fully tighten using Allen Key (T-1). DO NOT over tighten Allen Bolt.

Step 15

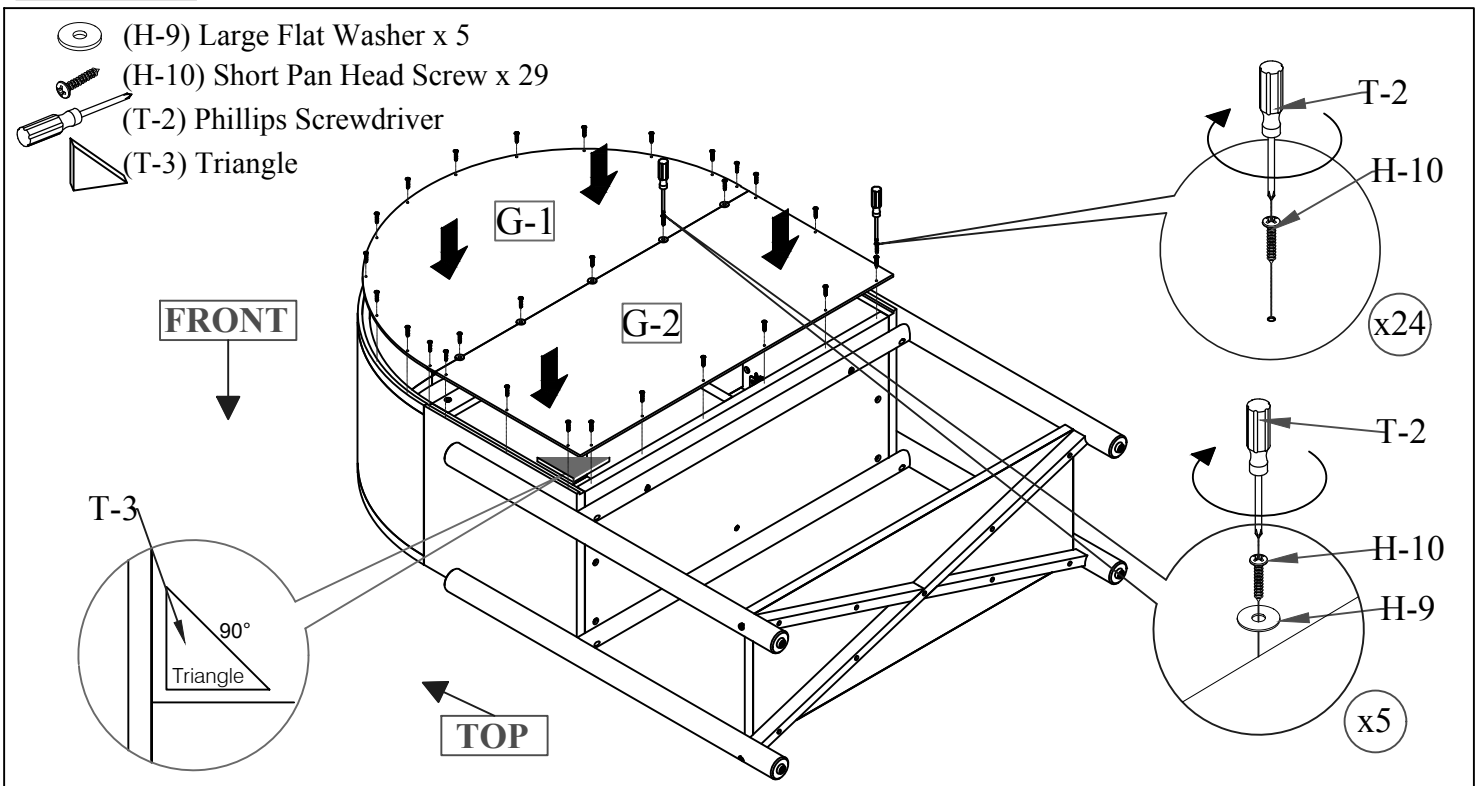


Position Upper Back Panel (G-1) and Lower Back Panel (G-2) onto assembly as shown. Make sure both panels are oriented correctly. Secure around the perimeter of the cabinet with Short Pan Head Screws (H-10) using Phillips Screwdriver (T-2; not included). DO NOT over tighten. Secure the middle of the Upper/ Lower Back Panel (G-1/G-2) to the back of the assembly with Short Pan Head Screws (H-10) and Large Flat Washers (H-9) using Phillips Screwdriver (T-2; not included), stacking the hardware in the order as shown. DO NOT over tighten. Check that the cabinet is square (90 degree) using the Triangle (T-3).

Step 16

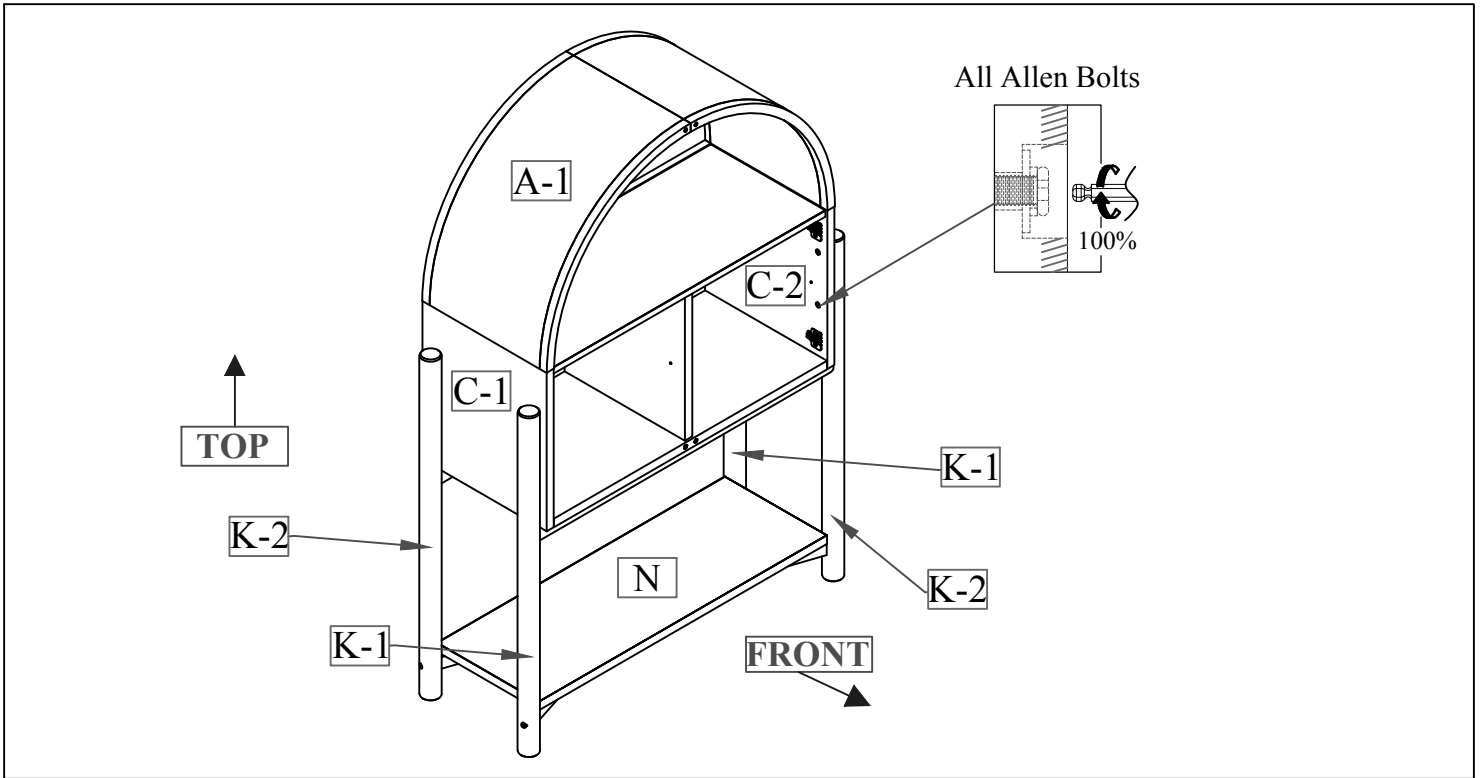


Using a second person to assist you, carefully turn The Assembled Unit upright. Tighten all Allen bolts from all previous steps at this time. DO NOT over-tighten Allen Bolts.

Step 17

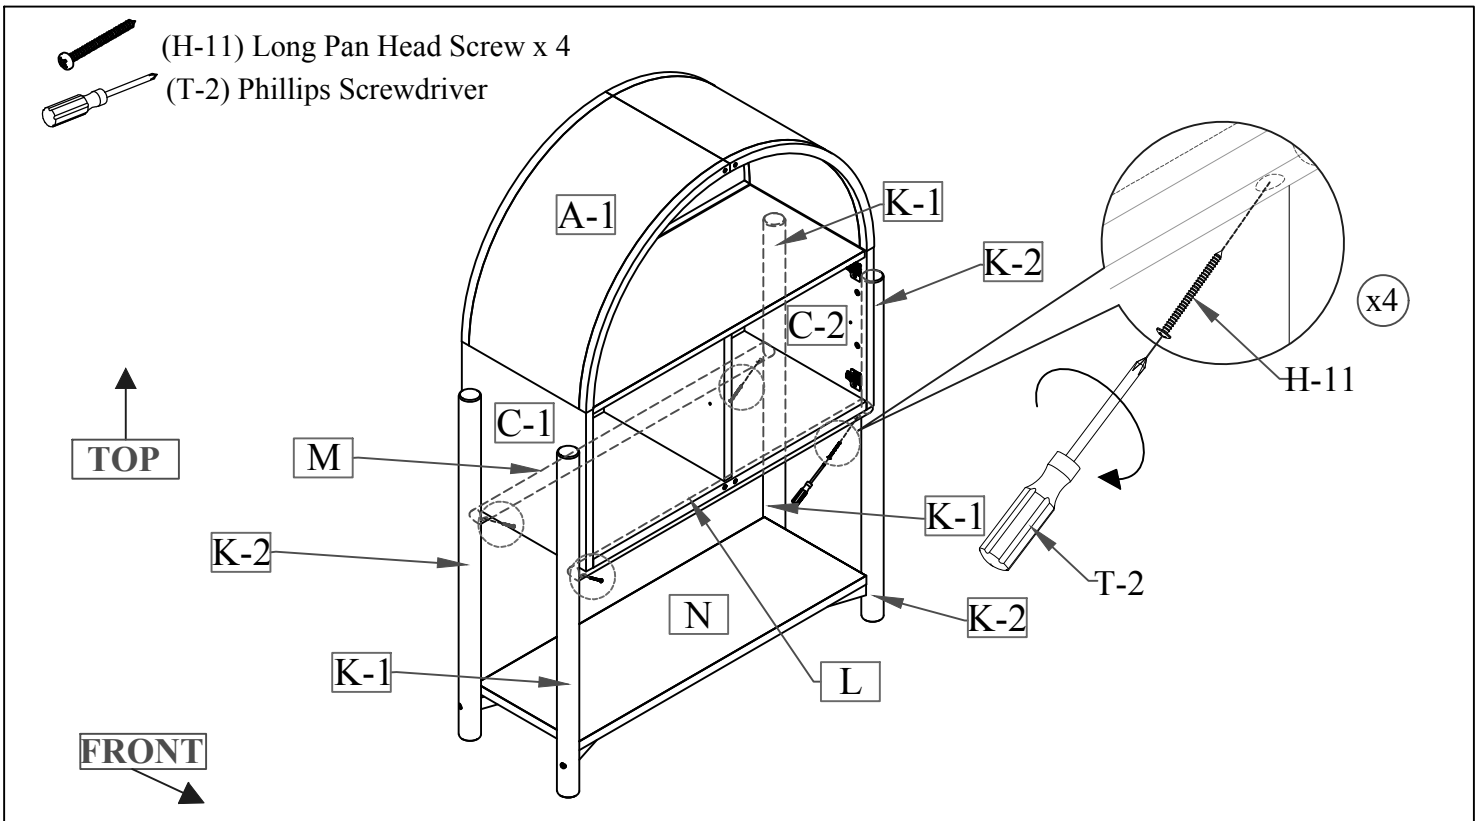

Secure the Front/ Back Horizontal Frame (L/M) with Legs 1&2 (K-1/K-2) using Long Pan Head Screws (H-11) and a Phillips Screwdriver (T-2; not included) as shown. DO NOT over tighten.


Step 18

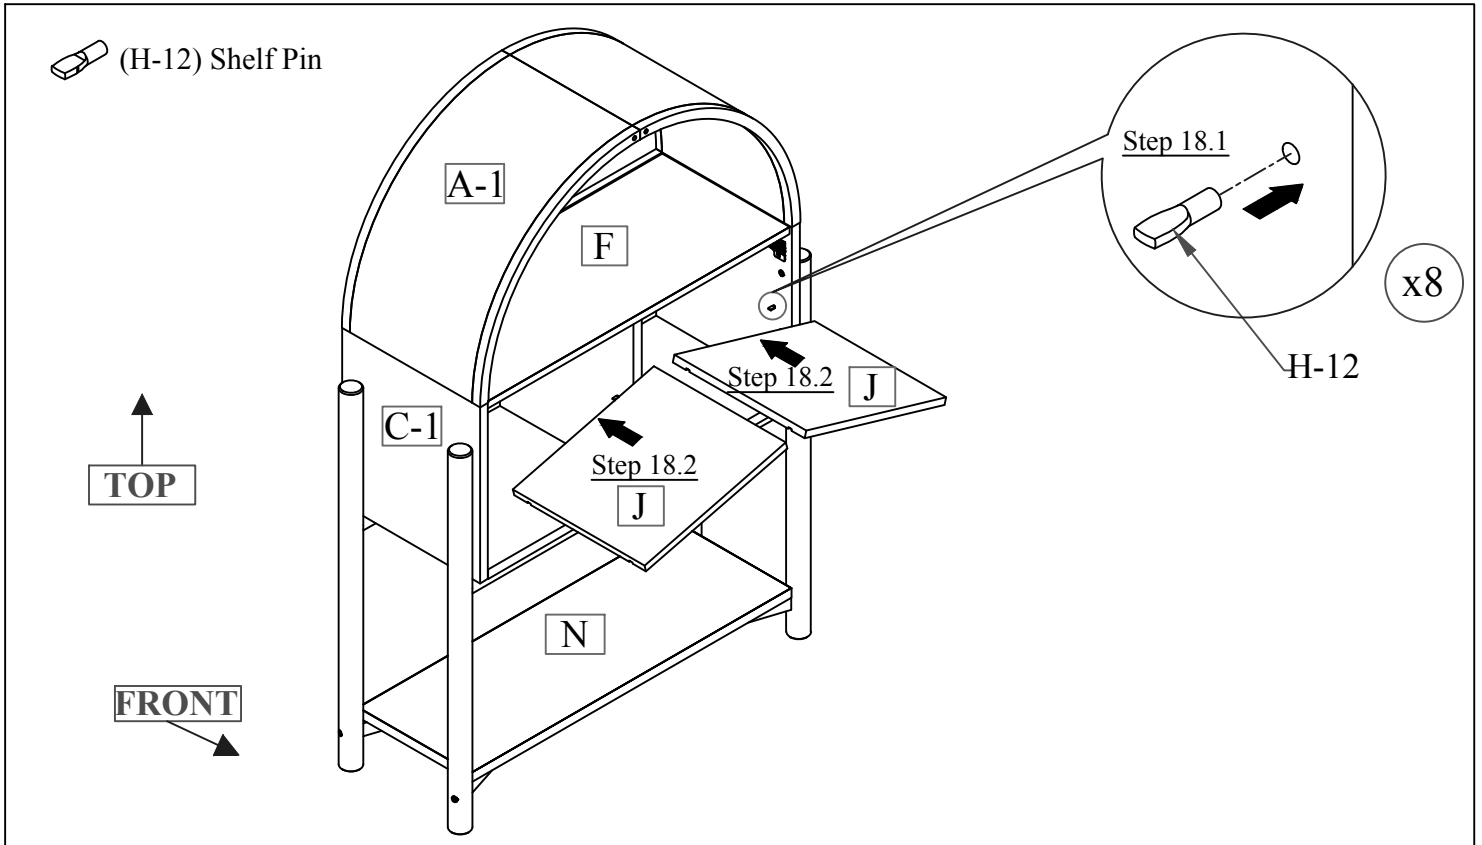

Step 18.1: Insert Shelf Pins (H-12) into the desired hole locations on Left Side Panel (C-1), Right Side Panel (C-2) and Divider Panel (D).

Step 18.2: Turn Removable Shelf (J) diagonally and carefully insert into position as shown, making sure they rest evenly on each Shelf Pin (H-12).

Step 19

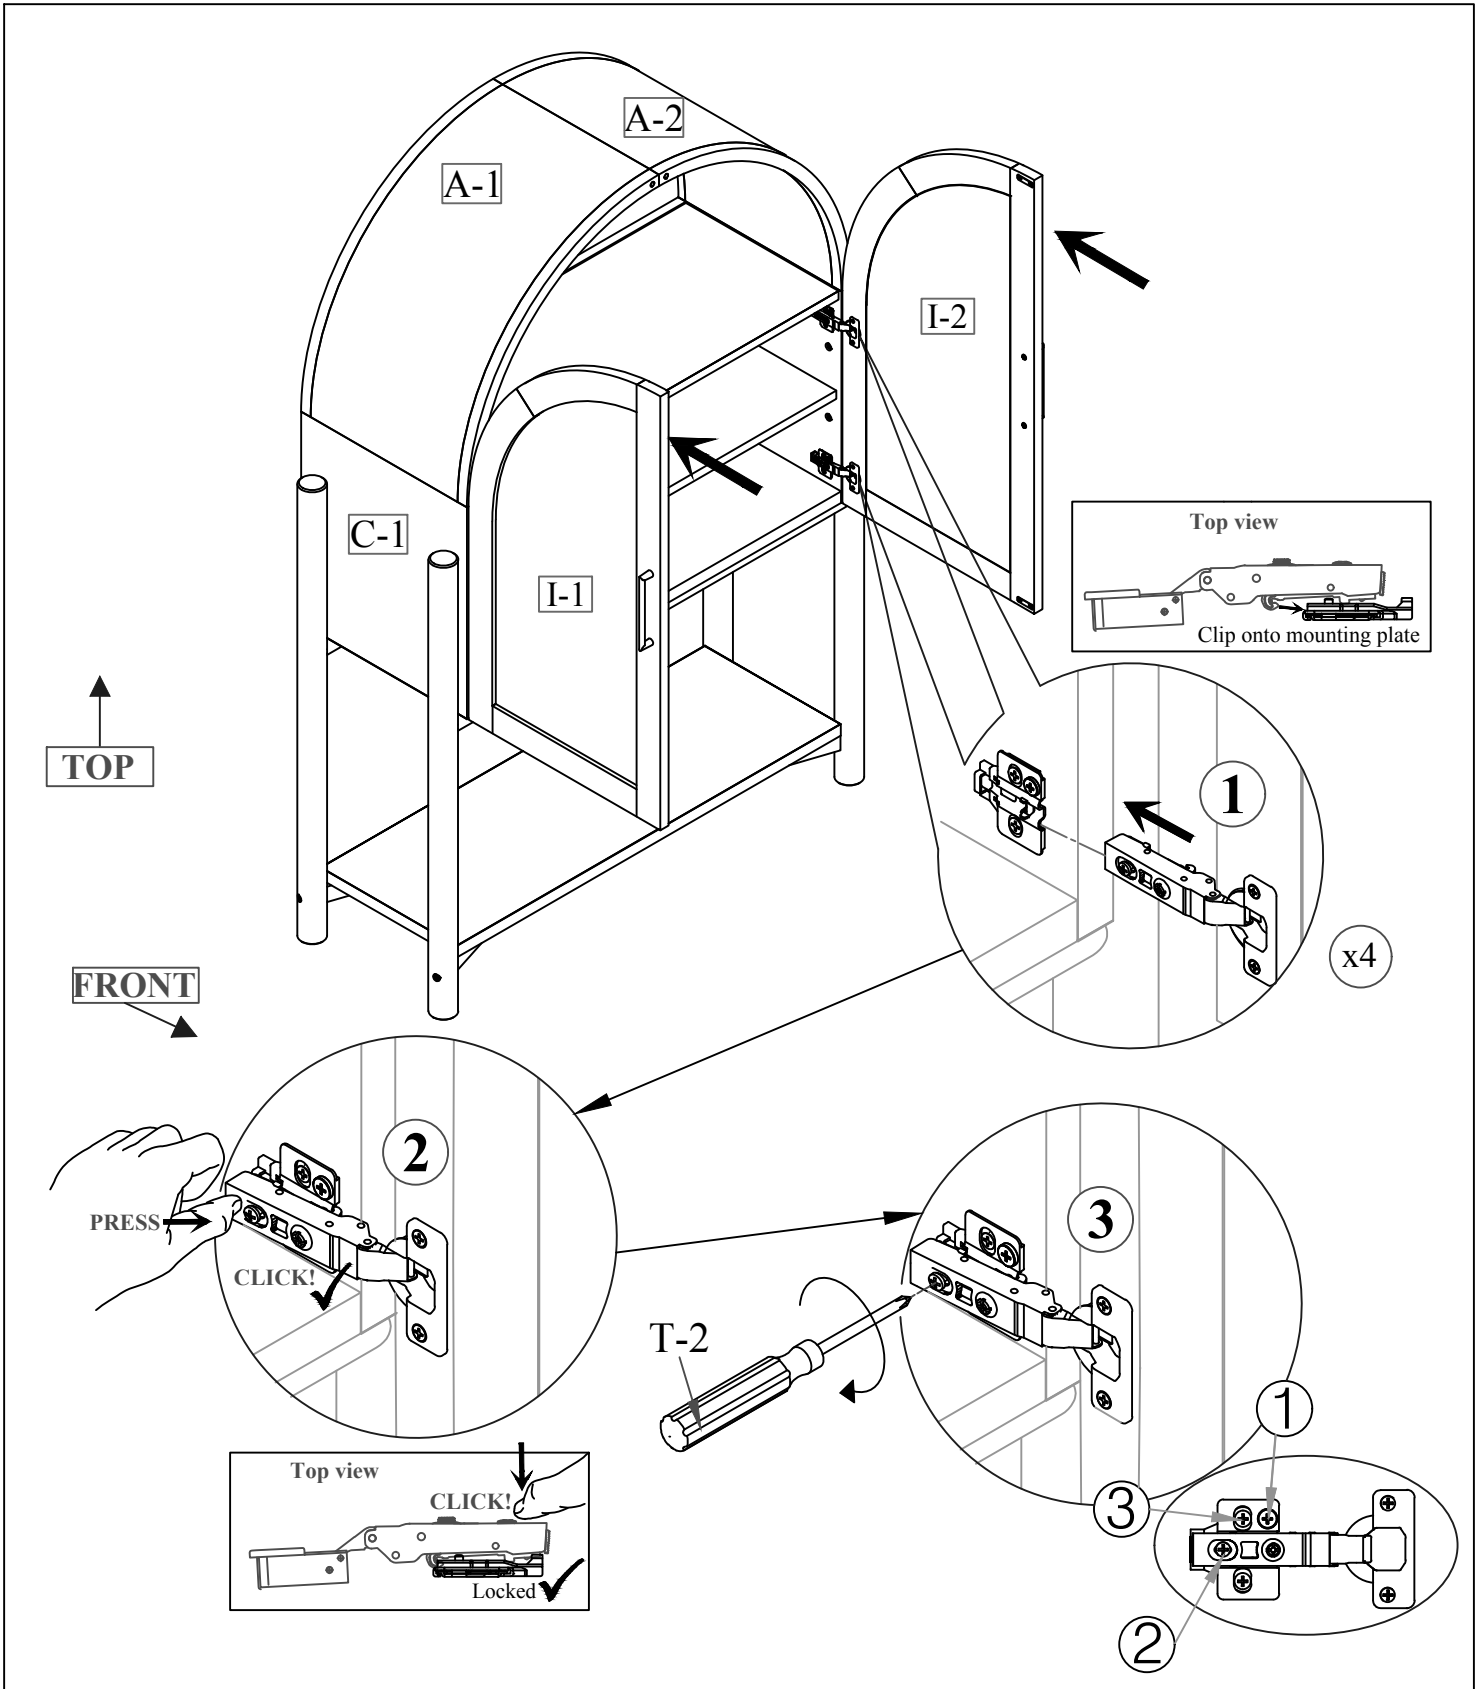


Position and engage the Right Door Frame (I-2) to the Right Side Panel (C-2) by clipping the hook of the Concealed Hinges (H-15), which is toward the door frame, into the trench of Mounting Plates (H-16). Then, use your finger to press the back end of the concealed hinge down until you hear a "Click!". Secure Concealed Hinges (H-15) by tightening installed screws (designated #2 in the diagram). DO NOT YET FULLY TIGHTEN. It is suggested to secure the TOP hinge first.

Repeat to install the Left Door Frame (I-1) to Left Side Panel (C-1).

****Note:** When installing the Doors (I-1, I-2) for the first time, loosen the Screw (3) on the Mounting Plate (H-16) a 1/2 rotation. This will make it easier to slide the hinges on the hinge mounting plates.


Step 20

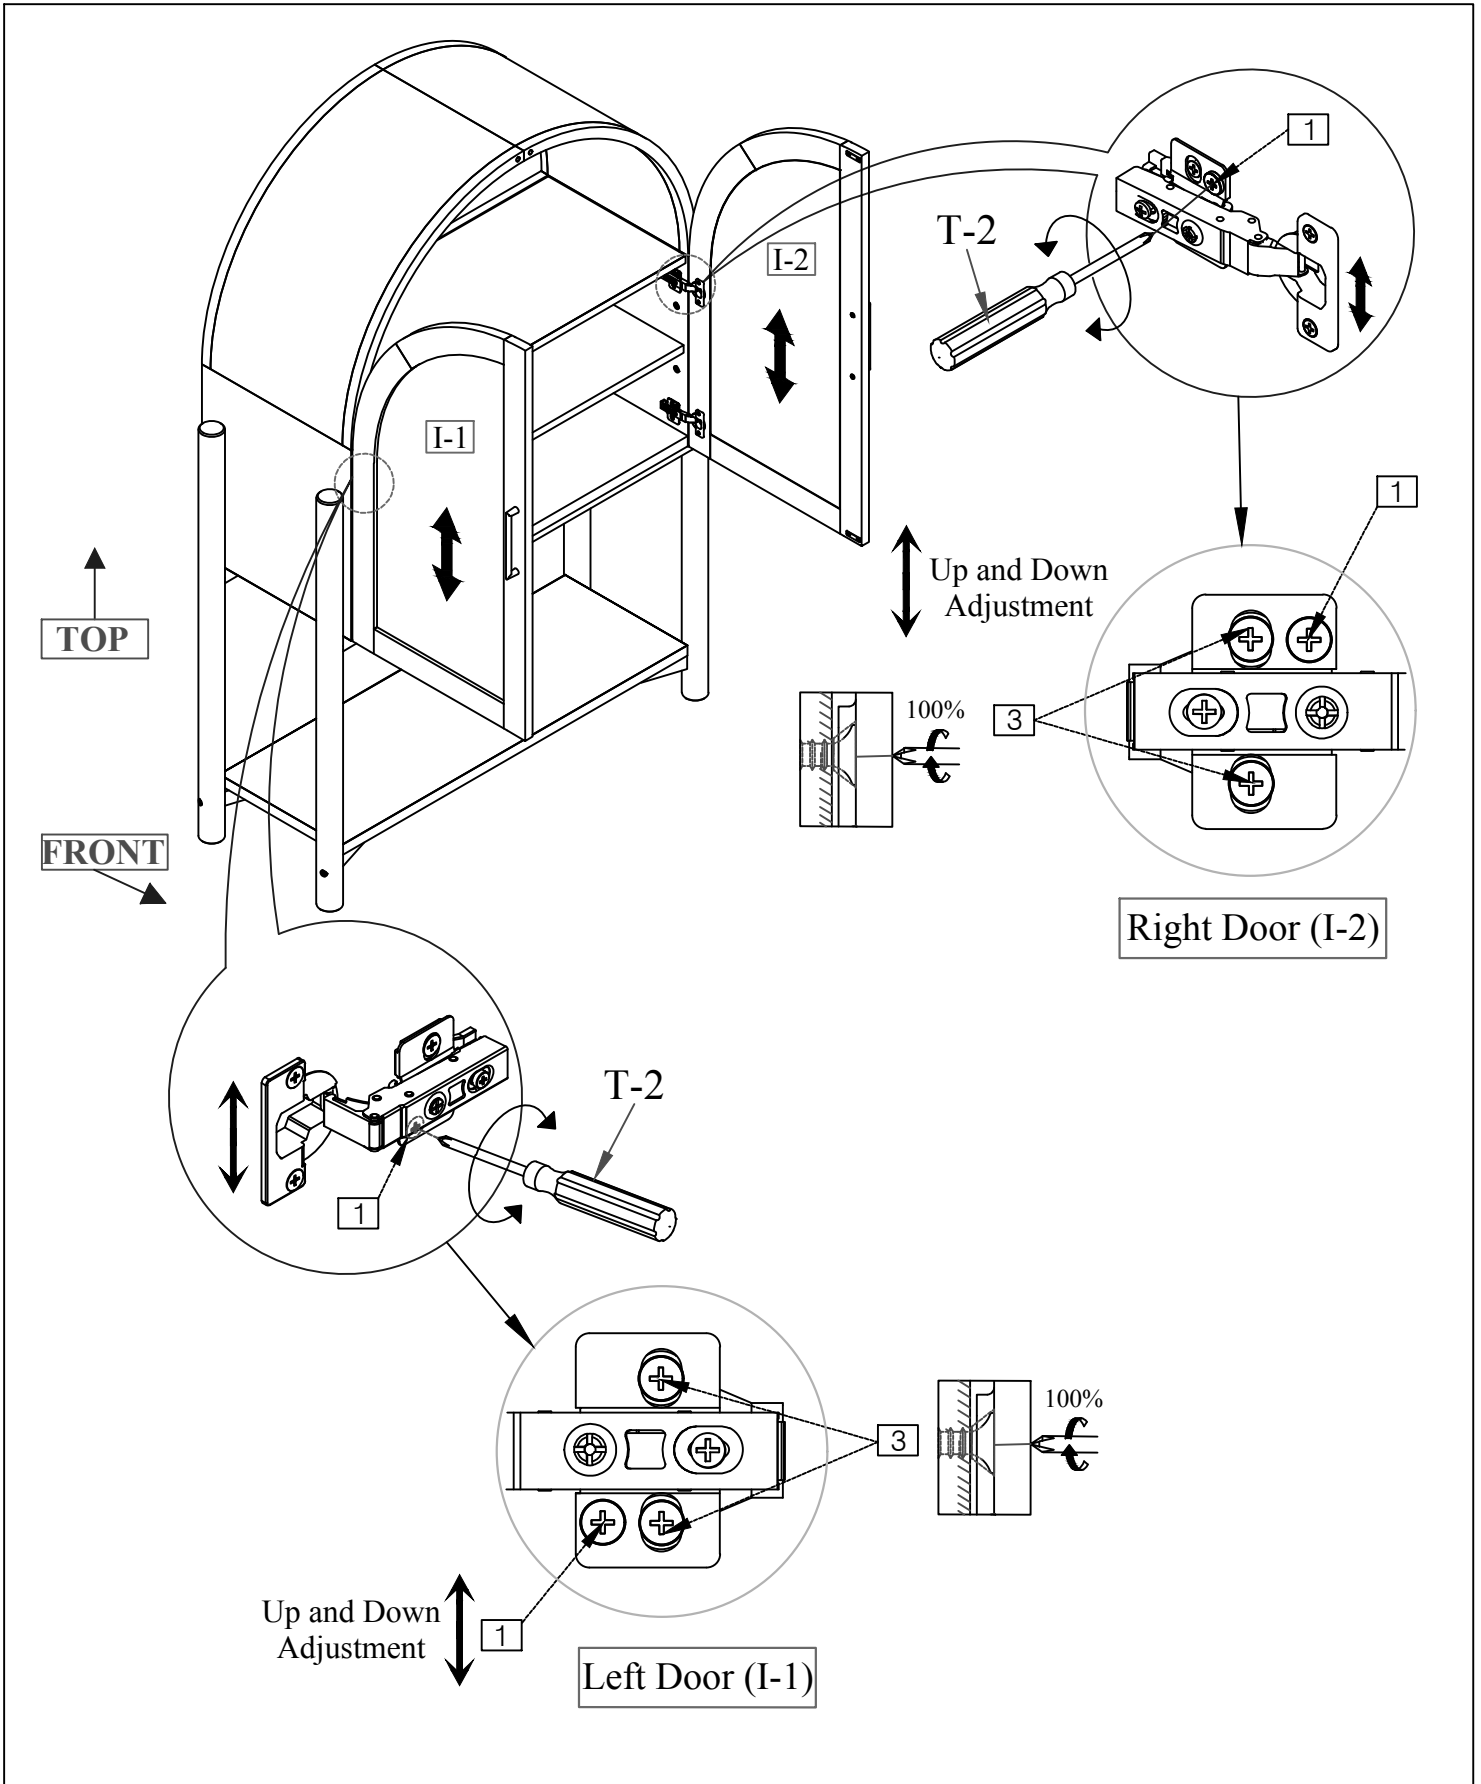


To adjust door height, using Phillip Screwdriver (T-2; not included) to secure screw (designated #1) on the Mounting Plate (H-16) and adjust the door up or down to the desired position. Tighten, check position, and repeat as necessary by using Phillips Screwdriver (T-2; not included). Turning counter-clockwise to adjust down and turning clockwise to adjust up. Before fully tightening all screws, adjust all doors. Once satisfied, fully tighten screws (designated #3) on Mounting Plates (H-16). **DO NOT OVER TIGHTEN.**

Adjusting the fit on Concealed Hinges


To adjust door height, adjust screws designated 1 on mounting plate and adjust door to desired position. Check and repeat if necessary by using Phillips Screwdriver (T-2).

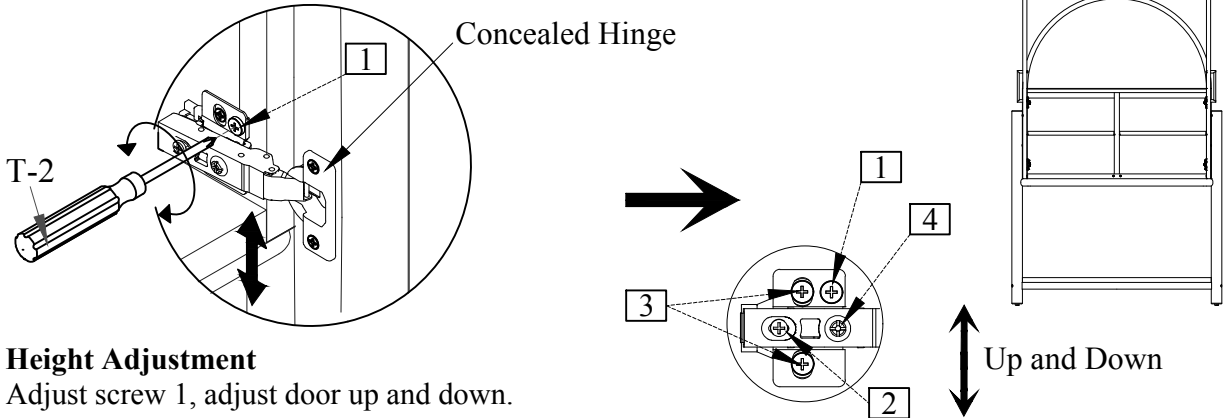


To adjust door depth, loosen screw designated 2 on mounting plate and adjust door to desired position. Check and repeat if necessary by using Phillips Screwdriver (T-2).

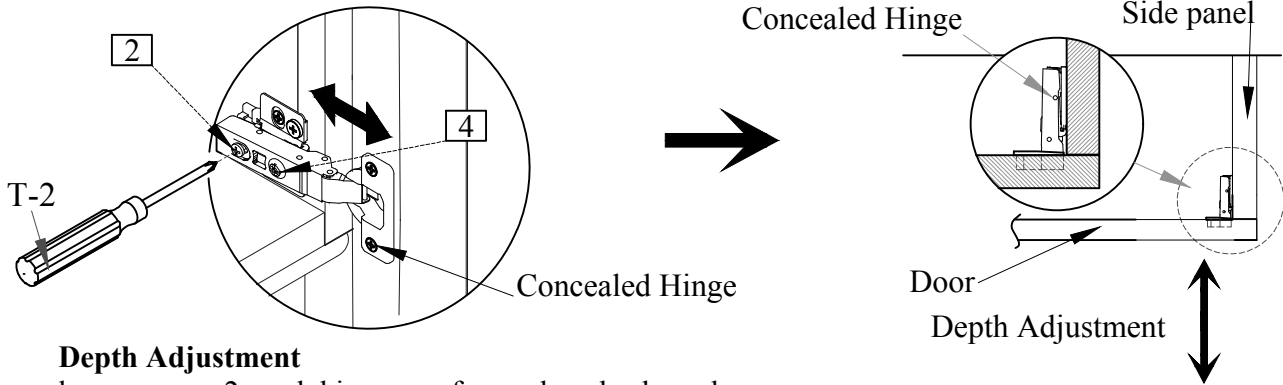

To adjust door side to side, loosen screws designated 4 on mounting plate and adjust door to desired position. Tighten, check and repeat if necessary by using Phillips Screwdriver (T-2).


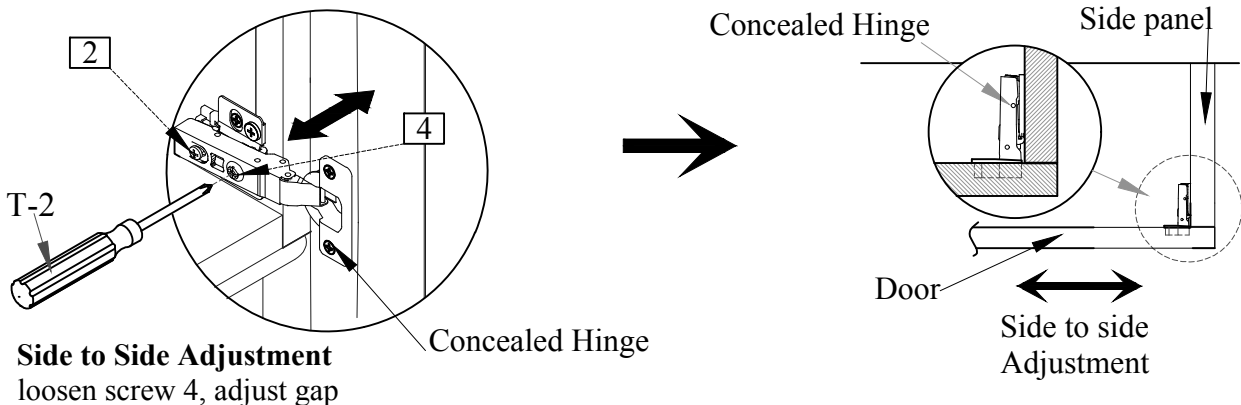


Tips: If you want to remove the door from the cabinet, use your finger press on the end of the hinge as shown.

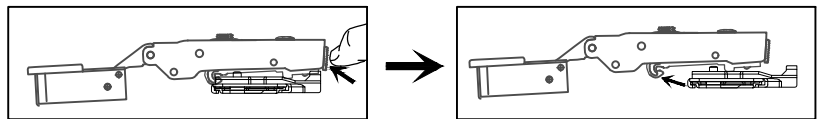

* The doors can be adjusted in 3 directions to create an even gap between the doors and the cabinet. Follow the appropriate directions above to adjust doors if necessary.



Step 21: Leveling Instruction

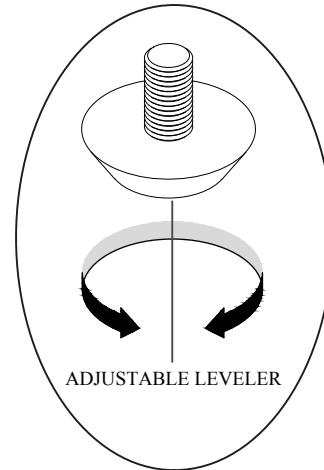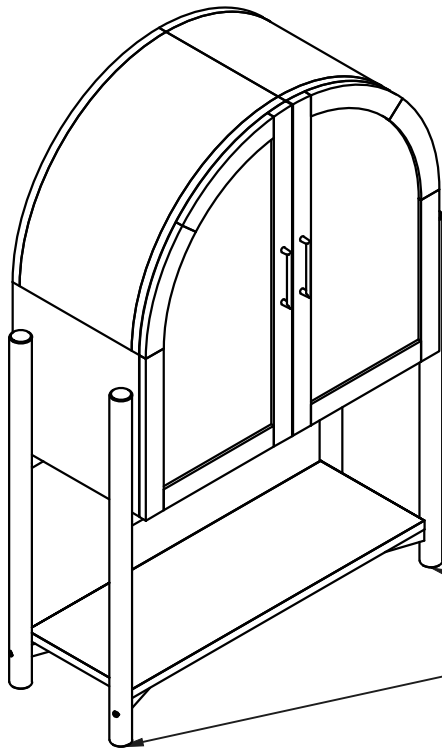

NOTE: Levelers can be used for adjustment if needed.



If RIGHT DOOR appears higher than the LEFT DOOR

Adjust the FRONT LEFT leveler until doors are even.

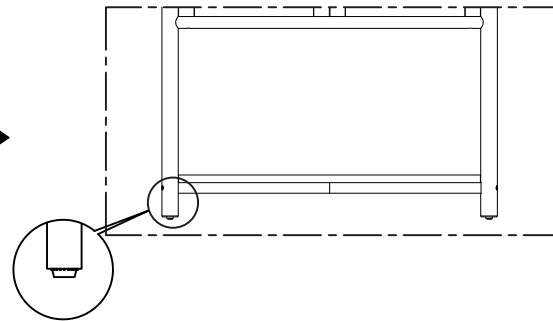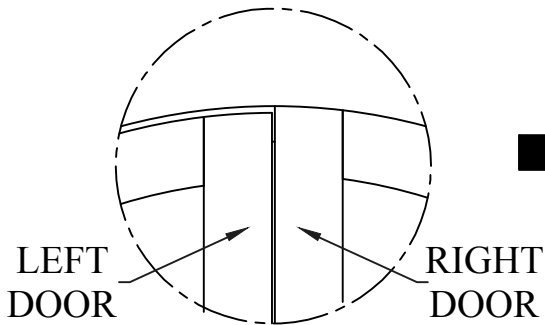

If LEFT DOOR appears higher than the RIGHT DOOR

Adjust the FRONT RIGHT leveler until doors are even.

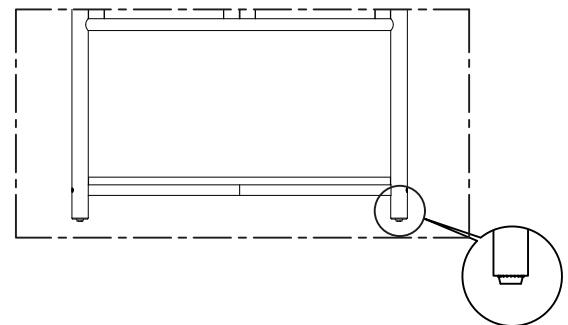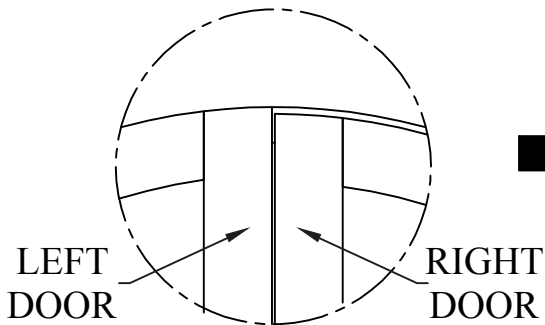


Ensure that all bolts have been fully tightened. Assembly is now complete and the cabinet is ready for use.

* Note: Once the cabinet is assembled and is level and square, the adjustable levelers can be used for further adjustment. First make sure all levelers rest evenly on the floor. If the RIGHT DOOR appears higher than the left door, adjust the LEFT FRONT leveler until the doors align. Adjust the RIGHT FRONT leveler if the LEFT DOOR is higher.


Anti-Tip Measures

! WARNING

Furniture tip overs can result in death or serious injuries. To reduce the likelihood of tip over, this product should be used with the enclosed Anti-Tip Kit. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware **OR** into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

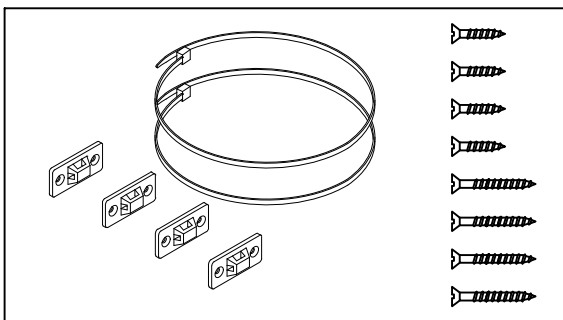

Anti-Tip kit contents

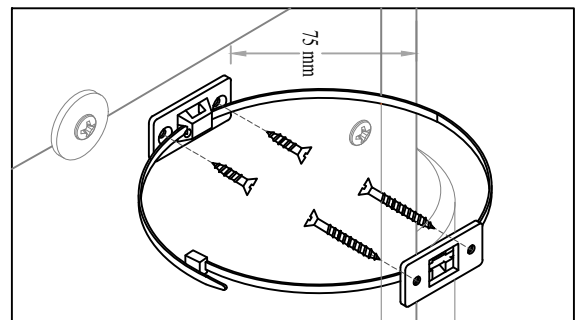

Anti-Tip kit installation

Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly 1 inch below the top. Where possible, mark a drill hole position on the wall where there is a stud and use a Drill or Screwdriver (NOT INCLUDED) to attach Wall Brackets to the wall using Long Screws in the location of the wall studs.

In a case where there is no wall stud, hold Brackets on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a Drill (NOT INCLUDED) with a drill bit roughly the diameter of the plastic Wall Plugs, drill pilot holes in marked positions. Insert the plastic Wall Plugs into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws through Brackets and into the corresponding holes in the wall using a Phillips Head Screwdriver (NOT INCLUDED).

Next, attach remaining 2 Brackets to the back of the piece using Short Screws so they align with Brackets installed on the wall. Loop Straps through Brackets (A) on the furniture piece, then through Brackets on the wall and tighten until snug. Installation is now complete.

IMPORTANT: Check that the Wall Brackets are firmly screwed into the wall and the Cable Ties are snug.

If there is any hesitation, please consult a professional or your local hardware store.

Warnings

⚠ WARNING



Children have died from furniture tip over. To reduce the risk of furniture tip over:

- **ALWAYS** install Anti-Tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on any drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- **DO NOT** defeat or remove any drawer interlock system if included with the product; it is an important stability and safety system.
- **Place heaviest items in the lowest drawers.**



Not intended for clothing storage use.



All products sold at World Market are not for commercial use and are intended for residential use only.

Care & Maintenance



DO NOT put hot items directly on furniture surface.



DO NOT clean furniture with harsh cleansers or polish.



DO NOT place furniture in direct sunlight.



DO NOT place furniture near heating or cooling vents.



DO NOT write on furniture without a padded barrier to protect the surface.



DO NOT place furniture outside. For **INDOOR USE ONLY**.



Dust and pick up spills using a clean, non-colored, lint-free dry cloth.

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of delivery. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.