



Contact 1-888-398-8643 for assistance.  
Do not return to place of purchase.

## Assembly Instructions

Model No. 801481, T51030PK, T51030PB, T51030BK, T51030AB, F-1634, F-7547, 200321, 265429

### Hardware/Parts

1	Handle (6)	61-801481-HD
2	Yoke	61-801481-YK
3	Poker Rod	61-801481-PKR
4	Brush Rod	61-801481-BHR
5	Base Rod	61-801481-BSR
6	Log Lifter	61-801481-LGL
7	Shovel Rod	61-801481-SLR
8	Poker Tip	61-801481-PKT
9	Brush Top	61-801481-BHC
10	Brush	61-801481-BH
11	Base	61-801481-BS
A	Nut	61-801481-NT

### Steps

#### Step 1

Attach handles to poker rod, shovel rod, brush rod and log lifter.

#### Step 2

Attach poker tip to poker rod. Attach brush top and brush to brush rod.



#### Step 3

Attach base rod to base. Attach nut, yoke and base handle to base rod.

#### Step 4

Place assembled poker, shovel, brush and log lifter on yoke.

**⚠ CAUTION: Keep this product clean by using a damp cloth. DO NOT use abrasive cleaners, as it will cause parts to tarnish.**

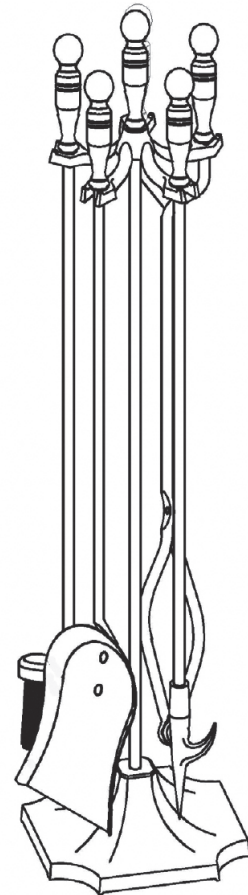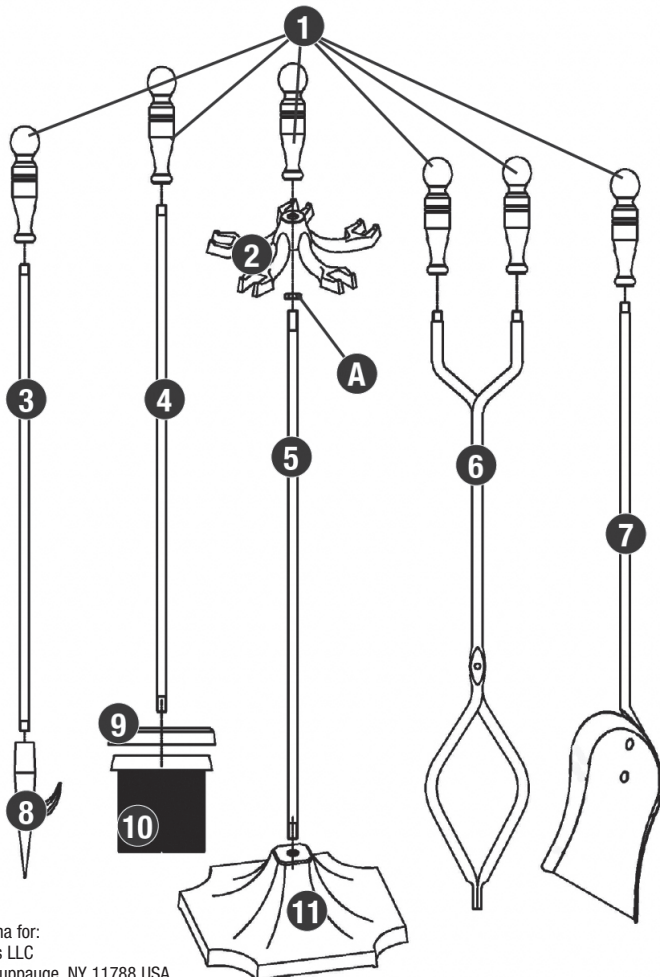

Manufactured in China for:  
Mr. Bar-B-Q Products LLC  
10 Commerce Dr. Hauppauge, NY 11788 USA  
1.888.398.8643 • MrBarBQProducts.com  
© Mr. Bar-B-Q Products LLC

UniFlame® is a registered trademark of Mr. Bar-B-Q Products LLC

801481\_s-OM-106 EF



Composer le 1-888-398-8643 pour obtenir de l'aide.  
Ne pas retourner au point de vente.

## Mode d'assemblage

Modèle n° 801481, T51030PK, T51030PB, T51030BK, T51030AB, F-1634, F-7547, 200321, 265429

### Quincaillerie/Pièces

1	Poignée (6)	61-801481-HD
2	Support à accessoires	61-801481-YK
3	Tige du tisonnier	61-801481-PKR
4	Tige du balai	61-801481-BHR
5	Tige sur socle	61-801481-BSR
6	Pince à bûches	61-801481-LGL
7	Tige de la pelle	61-801481-SLR
8	Pointe de tisonnier	61-801481-PKT
9	Protecteur du balai	61-801481-BHC
10	Balai	61-801481-BH
11	Socle	61-801481-BS
A	Écrou	61-801481-NT

### Étapes

#### Étape 1

Fixez les poignées aux tiges du tisonnier, de la pelle, du balai et de la pince à bûches.

#### Étape 2

Fixez la pointe du tisonnier sur la tige du tisonnier. Fixez le protecteur du balai et le balai sur la tige du balai.

#### Étape 3

Fixez la tige du socle dans le socle. Placez l'écrou, le support à accessoires puis la poignée du socle sur la tige du socle.

#### Étape 4

Placez le tisonnier, la pelle, le balai et la pince à bûches sur le support à accessoires.

**⚠ ATTENTION:** Veiller à ce que cet article demeure propre en le nettoyant à l'aide d'un chiffon humide. **NE PAS** utiliser de nettoyeurs abrasifs car ils risquent de ternir les pièces.

