

Important Note: Umbrella Must Be Secured With An Umbrella Base/ Pavers Or Bolted to Deck/ Patio ***Umbrella Base, Pavers & Deck/Patio Screws NOT Included***

Step 1:


- -Align Base Cross Members Together
- -With 4 Bolts Screw in Bottom Tube onto Cross Members



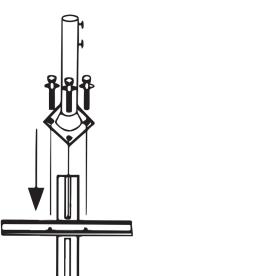


Step 2:

- -Insert Frame into Bottom Tube
- -Tighten Bottom Tube Screws Until Frame is Securely In Place

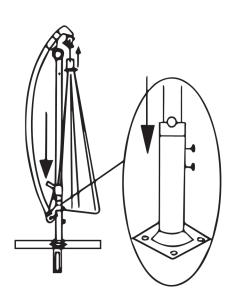

- -Crank Handle to Remove Any Slack In String
- -Insert Umbrella Finial Into Frame Housing

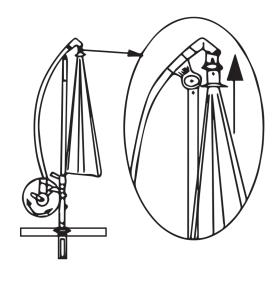

Step 4:

- -Unlock Frame Handle By Pulling Up On Lever
- -Push Umbrella Frame Arm Until the Umbrella is Fully Extended (as shown)
- -Lock Arm In Place by Pushing Down On Lever and Moving The Black Sleeve Into Place
- -Crank Handle to Open Umbrella

If a Tilted Umbrella Position is Desired Then...

Step 5:

-Unlock The Frame By Pulling Up On Lever

Step 6:

- -Slide Down Handle On Frame
- -Lock The Frame By Pushing Down On Lever

